

SPARE PARTS
LIST

RUDGE



MOTOR BICYCLES
1936

RUDGE-WHITWORTH
LTD. COVENTRY

Telegrams :
Rudge, Coventry

Telephone :
Coventry 4001

THOMAS PATTERSON

Automobile Engineer

1, ISADORE AVENUE

BELFAST, 13

Thomas J. ...
J. ...
Springfield, ...
Belmont

SPARE PARTS LIST

RUDGE



MOTOR BICYCLES

1936

**RUDGE-WHITWORTH
LTD. COVENTRY**

Telegrams :
Rudge, Coventry

Telephone :
Coventry 4001

Directors : Edward De Stein (Chairman); The Hon.
J. Mulholland; Major Gerald R. Ashton; J. R. Govett;
Alfred J. Denniss (Vice-Chairman and Managing
Director).

www.rpw.it

FOREWORD

THIS catalogue covers our 1936 range of motorcycles and the figures in the columns show the number of each part used on the model specified. Parts which may not be readily recognised by the description are illustrated. The serial numbers of the parts which appear in the illustrations are preceded by an asterisk.

To ensure correct supply it is necessary that Customers when ordering spares should quote the frame and engine numbers of their machines, together with the catalogue description and serial number of the actual part required.

Please do not include an order for spares in a letter on other subjects as this may cause delay.

The prices quoted do not include the cost of postage, packing or carriage, therefore Customers are asked to make allowance for these when sending cash with order.

It is our invariable rule not to supply spare parts until after receipt of a remittance to cover their cost and carriage. When cash does not accompany the order the parcel, when of a suitable size, will be despatched by post C.O.D. and in the case of larger consignments by rail C.O.D.

Complete Motor Bicycles or parts for repair must in all cases be consigned carriage paid, fully addressed to Rudge-Whitworth Ltd., Dept. M.C., Coventry, and bear the name and address of the sender. A letter of advice giving full particulars of the repairs required should also be posted at the same time.

Unadvised articles will lie here at Sender's risk.

By the term "overhaul" we understand that the Motor Bicycle or Engine is to be completely dismantled, and all worn or broken parts renewed. Therefore, estimates for this class of work cannot be submitted until the Bicycle or Engine has been taken down for examination. In the event of our estimates not being accepted it is distinctly understood that the cost of taking down and reassembling is payable by the Customer.

Quotations for spares or repairs remain valid for one month from date of issue, and if not accepted in that time are considered cancelled. It will then be necessary for the Customer to apply for a fresh quotation.

All accounts for repairs are strictly nett cash against invoice. Crates and cases used in the packing of spare parts or repairs are charged at cost and are not returnable.

All goods are forwarded carriage paid, but the cost of carriage will be included in our invoice.

This Catalogue cancels all previous issues, and we reserve the right to alter the prices quoted, without notice, as manufacturing conditions may demand.

RUDGE-WHITWORTH LIMITED.

Coventry, 1936

Please quote this number when ordering.

Serial Number

FRAME GROUP.

Price each
£ s. d.

| 1936 Special Model | 1936 Ulster Model | 1936 250 c.c. Sports Model | 1936 250 c.c. Rapid Model |
|--------------------|-------------------|----------------------------|---------------------------|
|--------------------|-------------------|----------------------------|---------------------------|

Number required per machine.

| | | | | | | |
|--------|---|--------|---|---|---|---|
| 6/1160 | Frame front M4752x1 built up with rear seat stays and enamelled ... | 8 5 0 | 1 | 1 | — | — |
| 6/1161 | Frame front M4753x1 built and enamelled ... | 4 15 0 | — | — | 1 | 1 |
| 5/102 | Rear seat stays M4216x1 built up and enamelled ... | 1 0 0 | — | — | 1 | 1 |
| 6/1162 | Chain stay R.H. M4653x1 ... | 13 9 | 1 | 1 | — | — |
| 6/1163 | " " L.H. M4653x2 ... | 17 3 | 1 | 1 | — | — |
| 6/1164 | " " R.H. M4626x1 ... | 11 0 | — | — | 1 | 1 |
| 6/1165 | " " L.H. M4626x2 ... | 12 0 | — | — | 1 | 1 |
| 5/107 | Rear stay and chain stay bolt M2733x6 ... | 5 2 | 2 | 2 | 2 | 2 |
| C1 | " " " " " " nut L280x4 ... | 2 | 2 | 2 | 2 | 2 |
| C2 | " " " " " " spring washer ... | 1/2 | 2 | 2 | 2 | 2 |
| 5/108 | Rear stay bolt mudguard nut M4220x1 ... | 4 | 2 | 2 | 2 | 2 |
| 6/1166 | Front cradle plate M4698x1 ... | 1 0 | 2 | 2 | — | — |
| 6/1167 | " " " cover M4688x1 ... | 4 3 | 1 | 1 | — | — |
| 5/110 | " " " M3490x1 ... | 10 | — | — | 2 | 2 |
| 6/1168 | " " " cover M4673x1 & 2 ... | 4 6 | — | — | 1 | 1 |
| C106 | " " " " screw M4537x1 ... | 1 | 2 | 2 | 2 | 2 |
| C9 | " " " " nut 564x9 ... | 1 | 2 | 2 | 2 | 2 |
| 6/1170 | Rear cradle plate M3591x3 R.H. ... | 4 6 | 1 | 1 | — | — |
| 6/1171 | " " " M3591x4 L.H. ... | 4 6 | 1 | 1 | — | — |
| 5/112 | " " " M3857x1 ... | 2 6 | — | — | 2 | 2 |
| 5/113 | Frame hollow bolt L257x3 ... | 1 0 | 2 | 2 | — | — |
| 5/114 | " " " L257x7 ... | 1 0 | — | — | 2 | 2 |
| 5/115 | " " " nut L106x3 ... | 6 | 4 | 4 | 4 | 4 |
| 5/116 | Chain stay bolt (front) M2196x2 ... | 6 6 | 1 | 1 | — | — |
| 5/117 | " " " " M2196x7 ... | 6 6 | — | — | 1 | 1 |
| 5/118 | " " " (rear) M4209x1 ... | 6 6 | 1 | 1 | — | — |
| 6/1172 | " " " L280x5 ... | 6 6 | — | — | 1 | 1 |
| C1 | " " " nut L280x4 ... | 2 | 3 | 3 | — | — |
| 5/120 | " " " M4221x1 ... | 3 | — | — | 1 | 1 |
| C2 | " " " spring washer ... | 1/2 | 3 | 3 | 1 | 1 |
| 5/126 | " " distance piece M2006x3 ... | 8 | 1 | 1 | — | — |
| 5/127 | " " " M2006x6 ... | 6 6 | — | — | 1 | 1 |
| 5/128 | Seat lug bolt S233x9 ... | 2 | — | — | 1 | 1 |
| C3 | " " " nut M4525x1 ... | 2 | — | — | 1 | 1 |
| C4 | " " " washer 148x22 ... | 1/2 | — | — | 1 | 1 |
| 5/129 | Cradle plate and engine bolt L280x5 ... | 6 2 | 4 | 4 | — | — |
| C1 | " " " " nut L280x4 ... | 2 | 4 | 4 | — | — |
| C2 | " " " " spring washer ... | 1/2 | 4 | 4 | — | — |
| 5/130 | " " " " L377x9 ... | 5 | — | — | 3 | 2 |
| 5/131 | " " " " L377x10 ... | 5 | — | — | 1 | 2 |
| C5 | " " " " nut 2039x8 ... | 2 | — | — | 4 | 4 |
| C6 | " " " " washer M4529x1 ... | 1 | — | — | 4 | 4 |
| C7 | " " " " spring washer ... | 1/2 | — | — | 3 | 3 |

FRONT FORK GROUP.

| | | | | | | |
|---------|--|--------|---|---|---|---|
| 6/1173 | Front fork girder M4492x1 built up and enamelled ... | 4 17 0 | 1 | 1 | 1 | — |
| 5/133 | Front fork side R.H. M3181x3 built up and enamelled ... | 1 11 6 | — | — | — | 1 |
| 5/134 | Front fork side L.H. M3181x4 built up and enamelled ... | 1 3 6 | — | — | — | 1 |
| *6/1174 | Fork rubber buffer M4495x3 ... | 4 | 4 | 4 | 4 | — |
| 5/138 | Fork spring support tube M3175x2 ... | 3 3 | — | — | — | 1 |
| 5/139 | " " " " nut M4252x2 ... | 9 | — | — | — | 2 |
| 5/140 | " " " " locating peg M3176x5 ... | 1 | — | — | — | 1 |
| C14 | " " " " spring washer ... | 1/2 | — | — | — | 1 |
| *5/141 | Top shackle M2514x1 with bushes M4041x1 ... | 12 6 | 1 | 1 | — | — |
| 6/1175 | " " M2514x18 " " M4041x1 ... | 11 6 | — | — | 1 | — |
| 5/143 | " " M4137x1 " " M4041x1 ... | 11 6 | — | — | — | 1 |
| *5/142 | Bottom shackle M4142x1 with bushes M4041x1 ... | 8 6 | 1 | 1 | 1 | — |
| 5/144 | " " L83x7 " " M4041x1 ... | 8 3 | — | — | — | 1 |
| *5/145 | Rear bolt for top and bottom shackles M2539x6 ... | 2 3 | 2 | 2 | 2 | — |
| *6/1176 | Front bolt for top shackle M4490x1 ... | 2 6 | 1 | 1 | 1 | — |
| *5/147 | " " " bottom shackle M2539x5 ... | 2 6 | 1 | 1 | 1 | — |
| 5/148 | Rear bolt for top and bottom shackles M2030x1 ... | 2 0 | — | — | — | 2 |
| 5/149 | Rear bolt for bottom shackle M3183x3 ... | 2 3 | — | — | — | 1 |
| *5/150 | Friction washer M2512x8 ... | 2 | 6 | 6 | 6 | — |
| 5/151 | " " L304x2 ... | 1 | — | — | — | 6 |
| *5/152 | Bush for shackle bolts M4041x1 ... | 8 | 8 | 8 | 8 | 6 |
| 5/153 | " " fork stem M4041x2 ... | 8 | — | — | — | 2 |
| 5/154 | Distance piece for top front shackle bushes L304x12 ... | 1 | 1 | 1 | 1 | 1 |
| 5/155 | Distance piece for bottom front shackle bushes L304x6 ... | 1 | 1 | 1 | 1 | 1 |
| 5/156 | Distance piece for handlebar lug and fork stem bushes L304x7 ... | 1 | 2 | 2 | 2 | 2 |

www.rpw.it

Please quote this number when ordering.

Serial Number

Front Fork Group—Contd.

Price each
£ s. d.

| 1936 Special Model | 1936 Ulster Model | 1936 250 c.c. Sports Model | 1936 250 c.c. Rapid Model |
|--------------------|-------------------|----------------------------|---------------------------|
|--------------------|-------------------|----------------------------|---------------------------|

Number required per machine.

| | | | | | | |
|---------|--|------|---|---|---|---|
| C97 | Fork spring bolt washer M1629x10 | 1 | 2 | 2 | — | — |
| C2 | " " " spring washer | 1/2 | 2 | 2 | 2 | — |
| 5/188 | " " " distance piece M4433x3 | 3 | 2 | — | 2 | — |
| 5/189 | " " " " M4433x4 | 3 | — | 2 | — | — |
| 5/190 | " " " rubber washer M4157x2 | 2 | 2 | 2 | 2 | — |
| 5/191 | " " " cupped washer M4271x1 | 2 | 2 | 2 | — | — |
| 5/192 | Front fork spring M3179x1 | 3 0 | — | — | — | 1 |
| 5/193 | " " " bracket (top) M3179x4 with plate | 2 0 | — | — | — | 1 |
| C21 | Front fork spring bolt (top) M3026x5 | 2 | — | — | — | 1 |
| C22 | " " " " nut M3062x1 | 1 | — | — | — | 1 |
| C23 | " " " " spring washer | 1/2 | — | — | — | 1 |
| 5/194 | " " " " bracket (bottom) M3177x2 with bolt | 1 9 | — | — | — | 1 |
| 5/195 | Front fork spring plate (bottom) M3177x3 | 2 | — | — | — | 1 |
| C4 | " " " bolt washer 148x22 | 1/2 | — | — | — | 1 |
| C7 | " " " " spring washer | 1/2 | — | — | — | 1 |
| C109 | " " " " leather washer L605x4 | 1 | — | — | — | 1 |
| C24 | Greaser for shackle bearing (Tecalmit) 1/16" | 6 | 4 | 4 | 4 | 5 |
| *5/197 | Handlebar and top shackle lug M4167x1 | 12 6 | 1 | 1 | 1 | — |
| 5/198 | " " " " M3847x2 | 11 0 | — | — | — | 1 |
| *5/199 | Clamping plate for ditto M2542x2 | 2 0 | 1 | 1 | 1 | 1 |
| 5/200 | " " " screw M2513x10 | 3 | 4 | 4 | 4 | 4 |
| *5/201 | Steering damper friction disc M2513x5 | 7 | 2 | 2 | 2 | 2 |
| *6/1186 | " " " centralising ring M4575x1 | 3 | 1 | 1 | 1 | 1 |
| *6/1187 | " " " star washer M4545x1 | 4 | 1 | 1 | 1 | 1 |
| *5/205 | " " " distance piece M3848x3 | 9 | 1 | 1 | 1 | 1 |
| 5/206 | " " " spring washer M2513x12 | 1 | 1 | 1 | 1 | 1 |
| *5/207 | " " " packing plate M4167x2 | 1 6 | 1 | 1 | 1 | — |
| 5/208 | " " " " screw M4149x3 | 3 | 2 | 2 | 2 | — |
| 6/1188 | " " " " (thin) M4169x3 | 3 | — | — | — | — |
| *5/209 | " " " hand wheel M2513x14 | 1 6 | 1 | 1 | 1 | 1 |
| 5/210 | " " " " locking screw M2513x11 | 3 | 1 | 1 | 1 | 1 |
| *5/211 | Steering damper anchor plate M4169x2 | 2 | 1 | 1 | 1 | — |
| *5/212 | " " " " arm M4144x2 | 9 | 1 | 1 | — | — |
| *5/213 | " " " " peg M4169x1 | 3 | 1 | 1 | — | — |
| 5/214 | " " " " plate M3848x2 | 2 | — | — | — | 1 |
| 6/1189 | " " " " arm M4735x1 | 1 0 | — | — | 1 | — |
| 5/215 | " " " " M4194x1 | 9 | — | — | — | 1 |
| *5/216 | Speedometer and revulator plate M4208x1 | 1 1 | 1 | 1 | — | — |
| 5/217 | " " " plate M4201x1 | 5 | — | — | — | — |
| C25 | " " " washer 1769x5 | 1/2 | — | — | 2 | — |
| 5/218 | Licence holder body M1396x11 | 7 | 1 | 1 | 1 | 1 |
| 5/219 | " " " cap M1396x3 | 10 | 1 | 1 | 1 | 1 |
| 5/220 | " " " clamping plate M1396x12 | 2 | 1 | 1 | 1 | 1 |
| 5/221 | " " " glass M1396x4 | 1 | 1 | 1 | 1 | 1 |
| 5/222 | " " " rubber ring M1396x6 | 1 | 1 | 1 | 1 | 1 |
| 5/223 | " " " paper backing M1396x5 | 1/2 | 1 | 1 | 1 | 1 |
| C107 | " " " screw M4522x2 | 1 | 2 | 2 | 2 | — |
| C26 | " " " " M4522x1 | 1 | — | — | — | 2 |
| C27 | " " " " nut 649x9 | 1 | 2 | 2 | 2 | 2 |

FRONT MUDGUARD GROUP.

| | | | | | | |
|--------|--|-------|---|---|---|---|
| 6/1190 | Front mudguard blade M4154x2 with stay fitted | 1 3 6 | 1 | — | — | — |
| 6/1191 | Front mudguard blade M4439x2 with stay fitted | 19 0 | — | 1 | — | — |
| 6/1192 | Front mudguard blade M4817x1 with stay fitted | 18 6 | — | — | 1 | — |
| 6/1193 | Front mudguard blade M4817x2 with stay fitted | 18 6 | — | — | — | 1 |
| C48 | Stay attachment bolt L568x8 | 2 | 2 | 2 | 2 | 2 |
| C22 | " " " " nut M3062x1 | 1 | 2 | 2 | 2 | 2 |
| C23 | " " " " spring washer | 1/2 | 2 | 2 | 2 | 2 |
| 5/229 | Front number plate M4117x1 complete with screws and nuts | 1 6 | 1 | 1 | 1 | — |
| 6/1194 | Front number plate M4669x1 complete with screws and nuts | 2 6 | — | — | — | 1 |
| 5/230 | Fork bridge clip M3184x1 | 2 | — | — | — | 2 |
| 6/1195 | " " " " M4901x1 | 4 | — | — | 2 | — |
| 5/231 | " " " " plate M3184x2 | 1 | — | — | 4 | 4 |
| C29 | " " " " screw M4520x1 | 2 | — | — | 4 | 4 |
| C19 | " " " " nut M4524x1 | 1 | — | — | 4 | 4 |
| C20 | " " " " spring washer | 1/2 | — | — | 4 | 4 |
| 5/232 | Front stand spring catch M3639x1 | 6 | 1 | 1 | 1 | 1 |
| 5/233 | " " " clip back plate M3639x2 with bolt | 8 | 1 | 1 | 1 | 1 |
| C30 | " " " " bolt nut 654x9 | 1 | 1 | 1 | 1 | 1 |

www.rpworld.it

Please quote this number when ordering.

Serial Number

REAR MUDGUARD GROUP.

Price each
£ s. d.

1936 Special Model
1936 Ulster Model
1936 250 c.c. Sports Model
1936 250 c.c. Rapid Model

Number required per machine.

| | | | | | |
|--------|---|-------|---|---|---|
| C31 | Front stand clip screw 564x6 | 1 | 1 | 1 | 1 |
| C9 | " " " " nut 564x9 | 1 | 1 | 1 | 1 |
| C32 | " " " " washer M4508x1 | 1 | 1 | 1 | 1 |
| 5/234 | Rear mudguard blade (detachable portion) M4204x2, 3 & 4 with stays M4205x1 & 2 fitted | 2 8 6 | 1 | — | — |
| 6/1196 | Rear mudguard blade (detachable portion) M4690x1 with stays M4441x1 & 2 fitted | 2 0 0 | — | 1 | — |
| 5/237 | Rear mudguard blade (fixed portion) M4204x1 | 8 6 | 1 | 1 | — |
| 6/1197 | Rear mudguard blade (detachable portion) M4659x3 with stays M4658x1 & 2 fitted | 2 0 0 | — | — | 1 |
| 6/1198 | Rear mudguard blade (detachable portion) M4659x1 with stays M4658x1 & 2 fitted | 2 0 0 | — | — | 1 |
| 6/1199 | Rear mudguard blade (fixed portion) M4659x2 | 7 6 | — | — | 1 |
| 6/1200 | Rear mudguard attachment bolt M4629x1 with tommy bar | 9 3 | 2 | 2 | — |
| 5/243 | Rear mudguard attachment bolt M4207x2 | 3 | — | — | 2 |
| 5/242 | " " " " M2241x8 (for fixed portion) | 2 | 2 | 2 | 2 |
| C33 | Chain stay attachment bolt M4520x2 | 2 | 1 | 1 | 1 |
| C19 | " " " " nut M4524x1 | 1 | 1 | 1 | 1 |
| C32 | " " " " washer M4508x1 | 1 | 1 | 1 | 1 |
| 5/244 | Rear number plate M2781x6 | 1 0 0 | 1 | — | — |
| 6/1201 | " " " " M4668x1 | 1 0 0 | — | 1 | — |
| 5/245 | " " " " M4117x2 | 1 0 0 | — | — | 1 |
| 6/1202 | " " " " M4668x3 | 1 0 0 | — | — | 1 |
| C34 | " " " " screw 649x10 | 1/2 | 4 | 3 | 4 |
| C9 | " " " " nut 564x9 | 1/2 | 4 | 3 | 4 |
| C10 | " " " " spring washer | 1/2 | 4 | 3 | 4 |
| 5/247 | Rear carrier (top) M3957x1 built up and enamelled | 9 6 | 1 | — | — |
| 6/1203 | Rear carrier (top) M4666x1 built up and enamelled | 9 6 | — | — | 1 |
| C33 | Carrier fixing screw M4520x2 | 2 | 4 | — | 4 |
| C25 | " " " " washer 1769x5 | 1/2 | 4 | — | 4 |
| 5/248 | Lighting cable clip M4359x1 | 1 | 2 | — | 1 |
| C37 | " " " " nut 4124x9 | 2 | 2 | — | 1 |
| 5/250 | Rear mudguard pad (Lycett No. 6B) | 8 11 | — | 1 | — |
| C38 | " " " " screw L538x8 | 2 | — | 4 | — |
| C19 | " " " " nut M4524x1 | 1 | — | 4 | — |
| C39 | " " " " washer M1424x3 | 1 | — | 4 | — |
| C20 | " " " " spring washer | 1/2 | — | 4 | — |

STANDS GROUP.

| | | | | | |
|--------|--|------|---|---|---|
| 6/1204 | Central stand M4713x1 | 11 0 | 1 | 1 | — |
| 5/255 | " " M3166x2 | 8 9 | — | — | 1 |
| 5/262 | " " spring M2815x1 | 1 | 1 | 1 | 1 |
| 5/263 | " " " " anchor pin (small) M2702x8 | 3 | 1 | 1 | — |
| 5/264 | " " " " " (long) M2703x3 | 3 | 1 | 1 | — |
| C5 | " " " " nut 2039x8 | 2 | 1 | 1 | 1 |
| C7 | " " " " spring washer | 1/2 | 1 | 1 | 1 |
| 5/265 | " " fulcrum bolt M2702x15 | 6 | 1 | 1 | — |
| 5/266 | " " " " M2702x20 | 6 | — | — | 1 |
| C42 | " " " " nut M4526x1 | 1 | 1 | 1 | 1 |
| C23 | " " " " spring washer | 1/2 | 1 | 1 | 1 |
| 5/267 | " " eccentric stop M2703x4 | 4 | 1 | 1 | 1 |
| C5 | " " " " nut 2039x8 | 2 | 1 | 1 | 1 |
| C7 | " " " " spring washer | 1/2 | 1 | 1 | 1 |
| 6/1205 | " " stop bolt M3778x4 | 9 | — | — | 1 |
| C108 | " " " " nut M3062x2 | 1 | — | — | 1 |
| C2 | " " " " spring washer (1/16") | 1/2 | — | — | 1 |
| 6/1206 | Hand operating lever M4832x1 with end piece | 12 6 | 1 | 1 | — |
| 5/271 | Hand lever pivot bolt M3451x4 | 1 9 | 1 | 1 | — |
| C11 | " " " " nut M4107x3 | 6 | 1 | 1 | — |
| C44 | " " " " washer M4519x2 | 1 | 1 | 1 | — |
| C13 | " " " " spring washer | 1/2 | 1 | 1 | — |
| 5/272 | " " connecting link M3452x2 | 6 | 1 | 1 | — |
| 5/273 | " " " " pivot bolt M2792x4 | 3 | 2 | 2 | — |
| C22 | " " " " nut M3062x1 | 1 | 1 | 1 | — |
| C23 | Hand lever connecting link pivot bolt spring washer | 1/2 | 1 | 1 | — |
| C45 | Hand lever connecting link pivot bolt spring washer (shakeproof) | 1/2 | 1 | 1 | — |
| 5/274 | Front stand M3962x2 | 4 6 | 1 | 1 | — |
| 6/1207 | " " M3962x1 | 4 6 | — | — | 1 |
| C48 | " " pivot bolt L568x8 | 2 | 2 | 2 | 2 |
| C22 | " " " " nut M3062x1 | 1 | 2 | 2 | 2 |
| C46 | " " " " washer 148x21 | 1/2 | 2 | 2 | 2 |
| 5/275 | " " " " bush M3962x3 | 2 | 2 | 2 | 2 |

www.rpw.it

Please quote this number when ordering.

Serial Number

Chain Cover and Chain Guard Group—Contd.

Price each
£ s. d.

1936 Special Model
1936 Ulster Model
1936 250 c.c. Sports Model
1936 250 c.c. Rapid Model

Number required per machine.

| | | | | | | | | | |
|--------|-------------------------|------------------------------------|-----------------------------|-----|-----|---|---|---|---|
| 5/335 | Rear chain guard | M4185x1 | ... | 7 | 0 | 1 | 1 | 1 | 1 |
| 5/336 | " | " | M4196x1 | 6 | 6 | 1 | 1 | 1 | 1 |
| 5/337 | " | " | stay M4195x1 | 2 | 2 | 1 | 1 | 1 | 1 |
| 5/338 | " | " | " M4195x2 | 2 | 2 | 1 | 1 | 1 | 1 |
| 5/340 | " | " | strengthening plate M3647x2 | 2 | 2 | 1 | 1 | 1 | 1 |
| C36 | " | " | bolt (rear) M1097x3 | 3 | 3 | 1 | 1 | 1 | 1 |
| C25 | " | " | " washer 1769x5 | 1/2 | 1/2 | 1 | 1 | 1 | 1 |
| C47 | " | " | " (front) L308x1 | 3 | 3 | 1 | 1 | 1 | 1 |
| 6/1218 | " | " | " M4750x1 | 3 | 3 | 1 | 1 | 1 | 1 |
| C20 | " | " | " spring washer | 1/2 | 1/2 | 1 | 1 | 1 | 1 |
| 5/339 | " | " | valance L.H. M3646x1 | 3 | 0 | 1 | 1 | 1 | 1 |
| 6/1219 | " | " | " L.H. M4748x1 | 3 | 0 | 1 | 1 | 1 | 1 |
| 6/1220 | Right hand valance | M4743x1 | ... | 3 | 0 | 1 | 1 | 1 | 1 |
| 6/1221 | " | M4749x1 | ... | 3 | 0 | 1 | 1 | 1 | 1 |
| C38 | Valance attachment bolt | L538x8 | ... | 2 | 1 | 1 | 1 | 2 | 2 |
| C32 | " | " washer M4508x1 | ... | 1 | 1 | 1 | 1 | 2 | 2 |
| 5/304 | " | " (rear) M2560x6 | ... | 4 | 2 | 2 | 2 | — | — |
| C55 | " | " nut M4107x4 | ... | 8 | 2 | 2 | 2 | — | — |
| C15 | " | " spring washer | ... | 1/2 | 1/2 | 2 | 2 | — | — |
| 5/341 | Primary chain | 75 links 1/2"x.305" | ... | 9 | 4 | 1 | 1 | — | — |
| 5/342 | " | 69 1/2"x.305" | ... | 8 | 7 | 1 | — | 1 | 1 |
| 5/343 | Rear chain | 93 links 5/8"x.255" | ... | 16 | 6 | 1 | — | — | — |
| 5/344 | " | 92 5/8"x.255" | ... | 16 | 5 | 1 | — | — | — |
| 5/345 | " | 97 5/8"x.255" (with sidecar gears) | ... | 17 | 3 | 1 | — | — | — |
| 6/1222 | " | 109 1/2"x.205" | ... | 13 | 7 | — | — | 1 | 1 |

PETROL AND OIL TANKS GROUP.

| | | | | | | | | | | |
|--------|--------------------------------|--|-----|-----|-----|---|---|---|---|---|
| 6/1223 | Petrol tank | M4410x1 less fittings (standard finish) | ... | 4 | 1 | 6 | 1 | — | — | — |
| 6/1224 | Petrol tank | M4410x2 less fittings (standard finish) | ... | 4 | 1 | 6 | — | 1 | — | — |
| 6/1225 | Petrol tank | M4410x1 less fittings (standard finish) | ... | 4 | 1 | 6 | — | — | 1 | — |
| 6/1226 | Petrol tank | M4148x1 less fittings (standard finish) | ... | 3 | 15 | 0 | — | — | — | 1 |
| 5/349 | Petrol tank | filler cap | ... | 2 | 9 | — | 1 | 1 | 1 | 1 |
| C50 | " | fixing screw M2288x7 | ... | 4 | 4 | — | 4 | 4 | 4 | 4 |
| C46 | " | " washer 148x21 | ... | 1/2 | 1/2 | — | 4 | 4 | 4 | 4 |
| C23 | " | " spring washer | ... | 1/2 | 1/2 | — | 4 | 4 | 4 | 4 |
| 5/350 | " | rubber pad M3026x3 | ... | 3 | 5 | — | 5 | 2 | 2 | 4 |
| C109 | " | leather washer L605x4 | ... | 1 | 1 | — | — | 2 | 2 | — |
| 5/351 | " | filter plug M2273x5 with gauze | ... | 1 | 3 | — | 1 | 1 | 1 | 1 |
| C64 | " | " washer M2273x8 | ... | 1 | 1 | — | 2 | 2 | 2 | 2 |
| 6/1227 | " | tap (Enots) 2 level type M4680x1 | ... | 3 | 6 | — | 1 | 1 | 1 | 1 |
| C65 | " | washer M2273x9 | ... | 1/2 | 1/2 | — | 1 | 1 | 1 | 1 |
| 5/353 | Knee grip | R.H. M4198x1 | ... | 2 | 3 | — | 1 | — | — | 1 |
| 5/354 | " | R.H. M3921x5 | ... | 2 | 3 | — | 1 | 1 | 1 | 1 |
| 5/355 | " | L.H. M3921x1 | ... | 2 | 3 | — | 1 | — | — | 1 |
| 5/356 | " | plate R.H. (outer) M3921x4 | ... | 3 | 3 | — | 1 | — | — | 1 |
| 5/357 | " | " M4199x2 | ... | 4 | 2 | — | 2 | 2 | 2 | 2 |
| C28 | " | " screw R.H. L568x7 | ... | 2 | 2 | — | 1 | 1 | 1 | 1 |
| C66 | " | " M2745x12 | ... | 3 | 3 | — | 2 | 3 | 3 | 2 |
| C25 | " | " washer 1769x5 | ... | 1/2 | 1/2 | — | 1 | 2 | 2 | 1 |
| C20 | " | " spring washer | ... | 1/2 | 1/2 | — | 2 | 3 | 3 | 2 |
| C52 | " | gate screw M3975x1 | ... | 3 | 3 | — | 1 | — | — | 1 |
| C67 | Steering damper arm screw | M2528x4 | ... | 5 | 5 | — | 2 | 2 | 2 | 2 |
| C25 | " | " washer 1769x5 | ... | 1/2 | 1/2 | — | 2 | 2 | 2 | 2 |
| C20 | " | " spring washer | ... | 1/2 | 1/2 | — | 2 | 2 | 2 | 2 |
| 5/358 | Petrol pipe | with nipples and nuts | ... | 2 | 3 | — | 1 | — | — | — |
| 5/359 | " | (Petroflex) with nipples and nuts | ... | 9 | 0 | — | — | — | — | — |
| 5/360 | " | with nipples and nuts | ... | 2 | 3 | — | — | — | — | 1 |
| 5/361 | Petrol equalizing pipe | M2116x8 with nipples and nuts | ... | 1 | 9 | — | 1 | 1 | 1 | 1 |
| 5/362 | Tank union for equalizing pipe | L115x3 | ... | 4 | 2 | — | 2 | 2 | 2 | 2 |
| C65 | " | washer M2273x9 | ... | 1/2 | 1/2 | — | 2 | 2 | 2 | 2 |
| 5/363 | Oil tank | M4111x1 | ... | 1 | 7 | 0 | 1 | 1 | 1 | 1 |
| 5/364 | Oil filler cap | ... | ... | 2 | 9 | — | 1 | 1 | 1 | 1 |
| C63 | Oil tank drain plug | M1176x3 | ... | 3 | 3 | — | 1 | 1 | 1 | 1 |
| C65 | " | washer M2273x9 | ... | 1/2 | 1/2 | — | 1 | 1 | 1 | 1 |
| 5/365 | " | clip M4506x1 | ... | 9 | 2 | — | 2 | 2 | 2 | 2 |
| C68 | " | screw M2294x1 | ... | 2 | 4 | — | 4 | 4 | 4 | 4 |
| C20 | " | spring washer | ... | 1/2 | 1/2 | — | 4 | 4 | 4 | 4 |
| 5/366 | " | rubber packing | ... | 2 | 2 | — | 1 | 1 | 1 | 1 |
| 5/367 | " | felt filter with cage | ... | 3 | 0 | — | 1 | 1 | 1 | 1 |
| 5/370 | " | filter tube M3631x11 with inner tube | ... | 1 | 4 | — | 1 | 1 | 1 | 1 |
| 5/371 | " | " cork washer M3925x6 | ... | 1/2 | 1/2 | — | 1 | 1 | 1 | 1 |
| 5/372 | " | " distance piece M3925x7 | ... | 2 | 2 | — | 1 | 1 | 1 | 1 |
| 5/369 | " | top cap M3631x6 with spring and washers fitted | ... | 1 | 1 | — | 1 | 1 | 1 | 1 |

www.worpo.it

Please quote this number when ordering.

Serial Number

Petrol and Oil Tanks Group—

Price each
£ s. d.

1936 Special Model
1936 Ulster Model
1936 250 c.c. Sports Model
1936 250 c.c. Rapid Model

Number required per machine.

| | | | | | | |
|-------|---|------|---|---|---|---|
| 5/373 | Oil pipe with unions and rubber connection (from tank to pump) | 7 6 | 1 | — | — | — |
| 5/374 | Oil pipe (Petroflex) with unions (from tank to pump) | 10 6 | — | 1 | — | — |
| 5/375 | Oil pipe with unions (from tank to pump) ... | 3 9 | — | — | 1 | — |
| 5/376 | Oil return pipe with unions and rubber connection | 7 6 | 1 | — | — | 1 |
| 5/377 | " " " (Petroflex) with unions ... | 10 6 | — | 1 | — | — |
| 5/378 | " " " with unions | 3 6 | — | — | 1 | — |
| C69 | " pipe union nut M2690x1 | 6 6 | 4 | 4 | 4 | 4 |
| C70 | " " " washer M2690x8 | 1 | 8 | 8 | 8 | 8 |
| 5/379 | " " with union and nut (from pump to cylinder) | 3 3 | 1 | 1 | — | — |
| 5/380 | Oil pipe with union (from pump to cylinder) | 3 3 | — | — | 1 | — |
| 5/381 | " " rubber connection with ferrules ... | 8 | — | — | 1 | — |
| 5/382 | " " (to base of cylinder) M3092x3 ... | 4 | — | — | 1 | — |
| 5/383 | " " union nut M3073x3 (pump end) ... | 6 | 1 | 1 | 1 | 1 |
| C71 | " " " washer M1474x5 | 1/2 | 2 | 2 | 2 | 2 |

ENGINE GROUP.

| | | | | | | |
|---------|--|--------|----|----|----|----|
| 5/384 | Cylinder head M4143x1 with valve guides, overhead rocker bearing rings and exhaust pipe adaptors fitted | 3 15 0 | 1 | — | — | — |
| 6/1228 | Cylinder head M4699x1 with valve guides fitted | 8 15 6 | — | 1 | — | — |
| 5/386 | Cylinder head M4186x2 with valve guides and studs fitted | 2 17 6 | — | — | 1 | — |
| 6/1229 | Cylinder head M4392x1a with valve guides fitted | 2 7 6 | — | — | — | 1 |
| *5/388 | Inlet valve overhead rocker M2976x1 ... | 7 6 | 1 | — | — | — |
| *5/389 | Exhaust valve overhead rocker M2976x2 ... | 7 6 | 1 | — | — | — |
| *5/390 | Inlet valve overhead rocker M3993x1 ... | 15 6 | — | 1 | — | — |
| *5/391 | Exhaust valve overhead rocker M2937x3 ... | 5 6 | — | 1 | — | — |
| *5/392 | Inlet valve overhead rocker M3301x3 ... | 6 0 | — | — | 1 | — |
| *5/393 | Exhaust valve overhead rocker M3301x2 ... | 6 3 | — | — | 1 | — |
| *5/394 | Inlet valve overhead rocker M4393x1 ... | 11 0 | — | — | — | 1 |
| *5/395 | Exhaust valve overhead rocker M4393x2 ... | 11 0 | — | — | — | 1 |
| *5/396 | R.H. overhead rocker M3345x1 | 6 0 | — | 1 | — | — |
| 5/397 | R.H. " " M3408x1 | 5 6 | — | — | 2 | — |
| *5/398 | O.H. rocker contact piece M3345x5 | 1 0 | — | 1 | — | — |
| 5/399 | " " " M3345x3 | 1 0 | — | — | 2 | — |
| *5/400 | L.H. overhead rocker M3345x2 | 5 3 | — | 1 | — | — |
| 5/401 | " " " M3408x2 | 5 0 | — | — | 2 | — |
| 5/402 | Overhead rocker roller (large) M2603x11 ... | 1 | 34 | — | — | — |
| 5/403 | " " " (small) M2603x12 | 1 | 24 | — | — | — |
| C72 | " " " (long) L148x9 | 1 | — | 28 | — | 24 |
| C73 | " " " (short) M1987x6 | 1 | — | 38 | — | 24 |
| 5/404 | " " " M3081x8 | 1 | — | — | 32 | — |
| 5/405 | " " " (for R.H. and L.H. rockers) M3180x3 | 1 | — | — | 56 | — |
| 5/406 | Overhead rocker bearing ring R.H. M2603x8 | 2 0 | 2 | — | — | — |
| 5/407 | " " " L.H. M2603x10 | 2 0 | 2 | — | — | — |
| *5/408 | Ex. " rocker " outer bearing plate R.H. M2983x4 | 4 | 1 | — | — | — |
| *5/409 | " " " inner bearing plate R.H. M2983x5 | 2 | 1 | — | — | — |
| *5/410 | Inlet rocker outer bearing plate R.H. M2983x3 | 4 | 1 | — | — | — |
| *5/411 | " " " inner bearing plate R.H. M2603x1 | 2 | 1 | — | — | — |
| *5/412 | Rocker split bearing plate (top) L.H. M2603x2 | 4 | 2 | — | — | — |
| *5/413 | " " " (bottom) L.H. M2603x13 | 4 | 2 | — | — | — |
| *5/414 | Rocker inner bearing plate L.H. M2603x4 ... | 2 | 2 | — | — | — |
| *5/415 | Rocker bearing cover plate L.H. M2735x2 with boss | 1 3 | 2 | — | — | — |
| 5/417 | Rocker bearing plate bolt (long) M2686x4 ... | 3 | 3 | — | — | — |
| 5/418 | " " " (short) M2603x14 | 3 | 4 | — | — | — |
| 5/419 | " " " " M2686x5 | 3 | 2 | — | — | — |
| C37 | " " " " nut 4124x9 | 2 | 7 | — | — | — |
| C20 | " " " " spring washer | 1/2 | 7 | — | — | — |
| C18 | Overhead rocker bearing greaser (Tecalemit) 3/16" | 2 | 4 | 3 | 2 | 2 |
| 5/420 | Overhead rocker bearing angle greaser (Tecalemit) 3/16" | 6 | — | — | 2 | — |
| *6/1230 | Overhead rocker support plate (rear) M4700x1 | 9 | — | 1 | — | — |
| *6/1231 | " " " (front) inlet M4701x1 | 4 | — | 1 | — | — |
| *6/1232 | Overhead rocker support plate (front) exhaust M4700x2 | 4 | — | 1 | — | — |
| 6/1233 | Overhead rocker support bolt (bottom) inlet M3816x5 | 4 | — | 1 | — | — |
| *5/474 | Overhead rocker support bolt distance piece M3906x2 | 4 | — | 1 | — | — |
| *5/422 | Overhead rocker support bolt (bottom) exhaust M3816x4 | 9 | — | 1 | — | — |

www.rpw.it

Please quote this number when ordering.

Serial Number Engine Group—Contd.

Price each
£ s. d.

1936 Special Model
1936 Ulster Model
1936 250 c.c. Sports Model
1936 250 c.c. Rapid Model

Number required per machine.

| Serial Number | Engine Group—Contd. | Price each £ s. d. | 1936 Special Model | 1936 Ulster Model | 1936 250 c.c. Sports Model | 1936 250 c.c. Rapid Model |
|---------------|--|-----------------------|--------------------|-------------------|----------------------------|---------------------------|
| *5/424 | Overhead rocker support bolt distance piece M3020x5 | 5 | — | 1 | — | — |
| *5/423 | Overhead rocker support bolt lock nut M3816x2 | 5 | — | 2 | — | — |
| 6/1234 | Overhead rocker support bolt (top) exhaust M4703x2 | 6 | — | 1 | — | — |
| *6/1235 | Overhead rocker support bolt distance piece M4703x1 | 2 | — | 1 | — | — |
| 6/1236 | Overhead rocker support bolt (top) inlet M2673x7 | 3 | — | 1 | — | — |
| *6/1237 | Overhead rocker support bolt distance piece M4701x2 | 2 | — | 1 | — | — |
| G5 | Overhead rocker support bolt nut 2039x8 | 2 | — | 2 | — | — |
| G7 | " " " " spring washer | 1/2 | — | 2 | — | — |
| *6/1238 | " " " " locking plate (inlet) M4704x1 | 1 | — | 1 | — | — |
| *6/1239 | Overhead rocker support bolt locking plate (exhaust) M4702x2 | 1 | — | 1 | — | — |
| *5/428 | Inlet O.H. rocker support plate L.H. M3268x1 | 3 | — | 1 | — | — |
| *5/429 | " " " " " stud M2066x7 | 2 | — | 2 | — | — |
| G1 | " " " " " nut L280x4 | 2 | — | 2 | — | — |
| G2 | " " " " " spring washer | 1/2 | — | 2 | — | — |
| *5/430 | Overhead rocker support plate M3099x1 | 6 | — | — | 2 | — |
| *5/431 | " " " " stud M3301x6 | 3 | — | — | 2 | — |
| 5/432 | " " " " nut M4252x1 | 6 | — | — | 2 | — |
| G7 | Overhead rocker support plate stud spring washer | 1/2 | — | — | 2 | — |
| *5/433 | Overhead rocker support plate distance piece M3301x5 | 4 | — | — | 2 | — |
| *5/434 | Overhead rocker support plate R.H. M4394x1 with bush | 1 9 | — | — | — | 1 |
| *5/435 | Overhead rocker support plate L.H. M4394x2 | 1 9 | — | — | — | 1 |
| *5/436 | " " " " bolt M4395x2 | 6 | — | — | — | 2 |
| G5 | " " " " nut 2039x8 | 2 | — | — | — | 2 |
| G7 | " " " " spring washer | 1/2 | — | — | — | 2 |
| G38 | " " " " fulcrum bolt L538x8 | 2 | — | — | — | 2 |
| G51 | Overhead rocker support plate fulcrum bolt nut M2288x14 | 2 | — | — | — | 2 |
| G20 | Overhead rocker support plate fulcrum bolt spring washer | 1/2 | — | — | — | 2 |
| *5/437 | R.H. and L.H. rocker support plate M3010x4 | 1 0 | — | 2 | — | — |
| 5/438 | " " " " " M3081x4 | 1 0 | — | — | 4 | — |
| *5/439 | " " " " pillar M3010x1 | 1 3 | — | 1 | — | — |
| 5/440 | " " " " " M3506x1 | 1 0 | — | — | 2 | — |
| 5/443 | " " " " nut M3010x3 | 2 | — | 2 | 4 | — |
| *5/441 | " " " " adjuster M3010x2 | 10 | — | 1 | — | — |
| 5/442 | " " " " M3506x2 | 9 | — | — | 2 | — |
| G22 | " " " " nut M3062x1 | 1 | — | 2 | 4 | — |
| *6/1240 | R.H. rocker bracket M4679x1 | 1 9 | — | 1 | — | — |
| 5/445 | " " " " M3081x5 | 1 0 | — | — | 2 | — |
| *6/1241 | " " " " bolt M3732x3 | 4 | — | 1 | — | — |
| 5/446 | " " " " M3021x4 | 3 | — | — | 2 | — |
| G76 | " " " " spring washer 3/8" | 1/2 | — | 1 | — | — |
| G45 | R.H. rocker bracket bolt spring washer 1/16" shakeproof | 1/2 | — | 1 | 2 | — |
| *5/447 | Overhead rocker stop plate M3345x4 | 1 | — | — | 2 | — |
| *5/448 | " " bearing pin M3906x1 | 8 | — | 1 | — | — |
| *5/449 | " " " " bush M3454x4 | 1 0 | — | 1 | — | — |
| *5/450 | " " " " washer M2940x6 | 3 | — | 2 | — | — |
| *5/451 | " " " " M3301x4 | 1 8 | — | — | 2 | — |
| *5/452 | " " " " washer M3103x3 | 2 | — | — | 4 | — |
| *5/453 | " " " " M4094x1 | 2 0 | — | — | — | 2 |
| *5/454 | " " " " distance piece M4094x2 | 4 | — | — | — | 2 |
| *5/455 | Overhead rocker collar M4095x1 | 6 | — | — | — | 4 |
| G5 | " " bearing pin nut 2039x8 | 2 | — | 1 | 4 | 4 |
| G7 | " " " " spring washer | 1/2 | — | 1 | 4 | 4 |
| *5/456 | R.H. rocker bearing pin M3021x3 | 1 6 | — | 1 | — | — |
| *5/457 | " " " " washer M3021x2 (cupped) | 2 | — | 2 | — | — |
| *5/458 | R.H. rocker bearing pin washer M2940x5 | 3 | — | 2 | — | — |
| *5/459 | " " " " M2940x10 | 3 | — | 2 | — | — |
| *5/460 | " " " " M3081x7 | 1 6 | — | — | 2 | — |
| *5/461 | " " " " washer M3103x6 (cupped) | 2 | — | — | 4 | — |
| *5/462 | R.H. rocker bearing pin washer M3103x1 | 2 | — | — | 4 | — |
| *5/463 | " " " " M3103x7 | 3 | — | — | 4 | — |
| *5/464 | L.H. rocker bearing pin M2939x4 | 1 6 | — | 1 | — | — |
| *5/465 | " " " " washer M2940x4 | 3 | — | 2 | — | — |

www.rpw.it

Please quote this number when ordering.

Serial Number


Engine Group—Contd.


Price each
£ s. d.

1936 Special Model
1936 Ulster Model
1936 250 c.c. Sports Model
1936 250 c.c. Rapid Model

Number required per machine.

| Serial Number | Engine Group—Contd. | Price each £ s. d. | 1936 Special Model | 1936 Ulster Model | 1936 250 c.c. Sports Model | 1936 250 c.c. Rapid Model |
|---------------|--|-----------------------|--------------------|-------------------|----------------------------|---------------------------|
| *5/466 | L.H. rocker bearing pin M3081x6 | 1 6 | — | — | 2 | — |
| *5/467 | " " " washer M3103x2 | 2 | — | — | 4 | — |
| C22 | R.H. and L.H. rocker bearing pin nut M3062x1 | 1 | — | 4 | 8 | — |
| C23 | " " " spring washer | 1 1/2 | — | 5 | 8 | — |
| *6/1242 | Overhead inlet rocker pin M4702x1 | 3 0 | — | 1 | — | — |
| *5/469 | " " " collar L149x3 | 5 | — | 2 | — | — |
| *5/470 | " " " pin distance piece | 4 | — | — | — | — |
| 5/471 | M1664x3 | 4 | — | 1 | — | — |
| C2 | Overhead inlet rocker pin nut M2066x4 | 2 | — | 2 | — | — |
| *5/472 | " " " " spring washer | 2 1/2 | — | 2 | — | — |
| 5/475 | Overhead rocker box M2983x1 | 5 0 | 1 | — | — | — |
| 5/476 | " " " cover M2983x2 | 3 6 | 1 | — | — | — |
| 5/477 | " " " M3927x1 | 4 3 | — | 1 | — | — |
| 5/478 | " " " M4171x1 | 4 9 | — | — | 1 | — |
| 5/479 | " " " cover M3099x4 | 3 0 | — | — | 1 | — |
| 5/480 | " " " M4395x1 | 4 9 | — | — | — | 1 |
| 5/481 | " " " cover L.H. M4129x1 | 4 6 | 1 | — | — | — |
| *C75 | " " " screw M2686x3 | 3 | 4 | — | — | — |
| C20 | " " " " spring washer | 1 1/2 | 2 | — | — | — |
| *6/1243 | " " " nut M4704x2 | 6 | — | 1 | — | — |
| *6/1244 | " " " screw M4705x1 | 6 | — | 1 | — | — |
| C76 | " " " " spring washer (shakeproof) | 1 1/2 | — | 2 | 2 | — |
| 5/482 | Overhead rocker cover nut M3906x4 | 6 | — | — | 2 | — |
| C77 | " " " screw M2686x6 | 5 | — | — | — | 1 |
| *5/483 | Cylinder head set screw M1851x5 | 1 3 | 5 | 5 | — | — |
| 5/484 | " " " M1851x7 | 1 0 | — | — | 4 | 4 |
| 5/485 | " " " washer M2417x3 | 6 | 1 | 1 | — | — |
| 5/486 | " " " M3092x2 | 4 | — | — | 1 | 1 |
| *5/487 | " " " plug M1474x4 | 6 | 1 | — | — | — |
| C71 | " " " washer M1474x5 | 1 1/2 | 1 | — | — | — |
| *5/488 | Carburettor flange bolt M2079x2 | 2 | 2 | 2 | — | — |
| C4 | " " " washer 148x22 | 1 1/2 | 2 | 2 | — | — |
| *5/489 | " " " stud M2079x10 | 4 | — | — | 2 | 2 |
| C22 | " " " nut M3062x1 | 1 | — | — | 2 | 2 |
| C23 | " " " spring washer | 1 1/2 | — | — | 2 | 2 |
| *5/490 | " " " washer M2079x3 | 3 | 1 | — | 1 | 1 |
| 5/491 | " " " M2079x9 | 5 | — | 1 | — | — |
| *5/492 | Ex. valve lifter lever M2991x4 | 1 6 | 1 | — | — | — |
| 5/493 | " " " locating button M2991x3 | 2 | 1 | — | — | — |
| *5/494 | " " " pivot pin M2991x5 | 9 | — | — | — | — |
| C5 | " " " nut 2039x8 | 2 | 1 | — | — | — |
| *5/495 | " " " lever M3020x3 | 1 3 | — | 1 | 1 | 1 |
| *5/496 | " " " pivot pin M3020x1 | 1 0 | — | 1 | 1 | 1 |
| *5/497 | " " " M3155x1 | 1 0 | — | — | 1 | 1 |
| *6/1245 | " " " M4428x2 | 9 | — | — | 1 | 1 |
| C19 | " " " nut M4524x1 | 1 | — | — | 1 | 1 |
| C25 | " " " washer 1769x5 | 1 1/2 | — | 1 | 1 | 1 |
| *5/499 | " " " cable stop M3020x2 | 2 | — | 1 | 1 | 1 |
| *5/500 | " " " M4396x1 | 3 | — | — | — | 1 |
| C19 | " " " nut M4524x1 | 1 | — | — | — | 1 |
| C20 | " " " " spring washer | 1 1/2 | — | — | — | 1 |
| 5/501 | Inlet valve M2979x2 | 4 6 | 2 | — | — | — |
| 5/502 | " " M3496x4 | 5 0 | — | 2 | — | — |
| 5/503 | " " M3096x2 | 4 3 | — | — | 2 | — |
| 5/504 | " " M4091x1 | 4 6 | — | — | — | 1 |
| 5/505 | Exhaust valve M3047x1 | 5 0 | 2 | — | — | — |
| 5/506 | " " M3040x1 | 5 6 | — | 2 | — | — |
| 5/507 | " " M3096x1 | 4 6 | — | — | 2 | — |
| 5/508 | " " M4091x3 | 4 6 | — | — | — | 1 |
| 5/509 | Valve guide M2979x3 | 1 5 | 4 | 2 | — | — |
| 5/510 | " " (inlet) M3496x5 | 1 5 | — | 2 | — | — |
| 5/511 | " " M3103x4 | 1 5 | — | — | 4 | — |
| 5/512 | " " M4095x2 | 1 3 | — | — | — | 2 |
| 5/513 | " " springs (inner and outer) M1673x9 & 10 per pair | 1 0 | 4 pr. | — | — | — |
| 5/514 | Valve springs (inner and outer) M1923x1 & 2 per pair | 1 2 | — | 4 pr. | — | — |
| 5/515 | Valve springs (inner and outer) L175x2 & 3 per pair | 1 0 | — | — | 4 pr. | — |
| 5/516 | Valve springs (inner and outer) M1923x3 & 4 per pair | 1 0 | — | — | — | 2 pr. |
| 5/517 | Valve spring seat (top) M4435x1 | 1 0 | 4 | 4 | — | 2 |
| 5/518 | " " " L77x15 | 9 | — | — | 4 | — |
| 5/519 | " " " (bottom) M2749x5 | 1 | 4 | 4 | — | — |
| 5/520 | " " " L555x5 | 1 | — | — | 4 | — |
| 5/521 | " " " M4396x2 | 4 | — | — | — | 2 |
| 5/522 | " " split collar M2239x5 | 3 1/2 | 8 | 4 | — | 4 |
| 5/523 | " " " L640x16 | 3 1/2 | — | 4 | 8 | — |
| 5/524 | " " tappet rod M4426x1 | 1 9 | 2 | 2 | — | 2 |
| 5/525 | " " " M4426x2 | 1 8 | — | — | 2 | 2 |
| C30 | " " lock nut 654x9 | 1 | 2 | 2 | 2 | 2 |

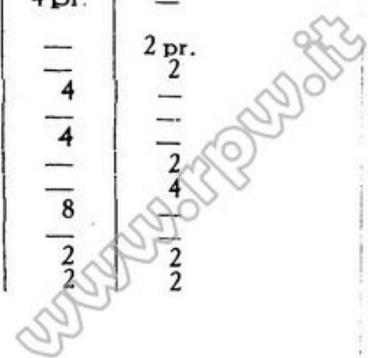

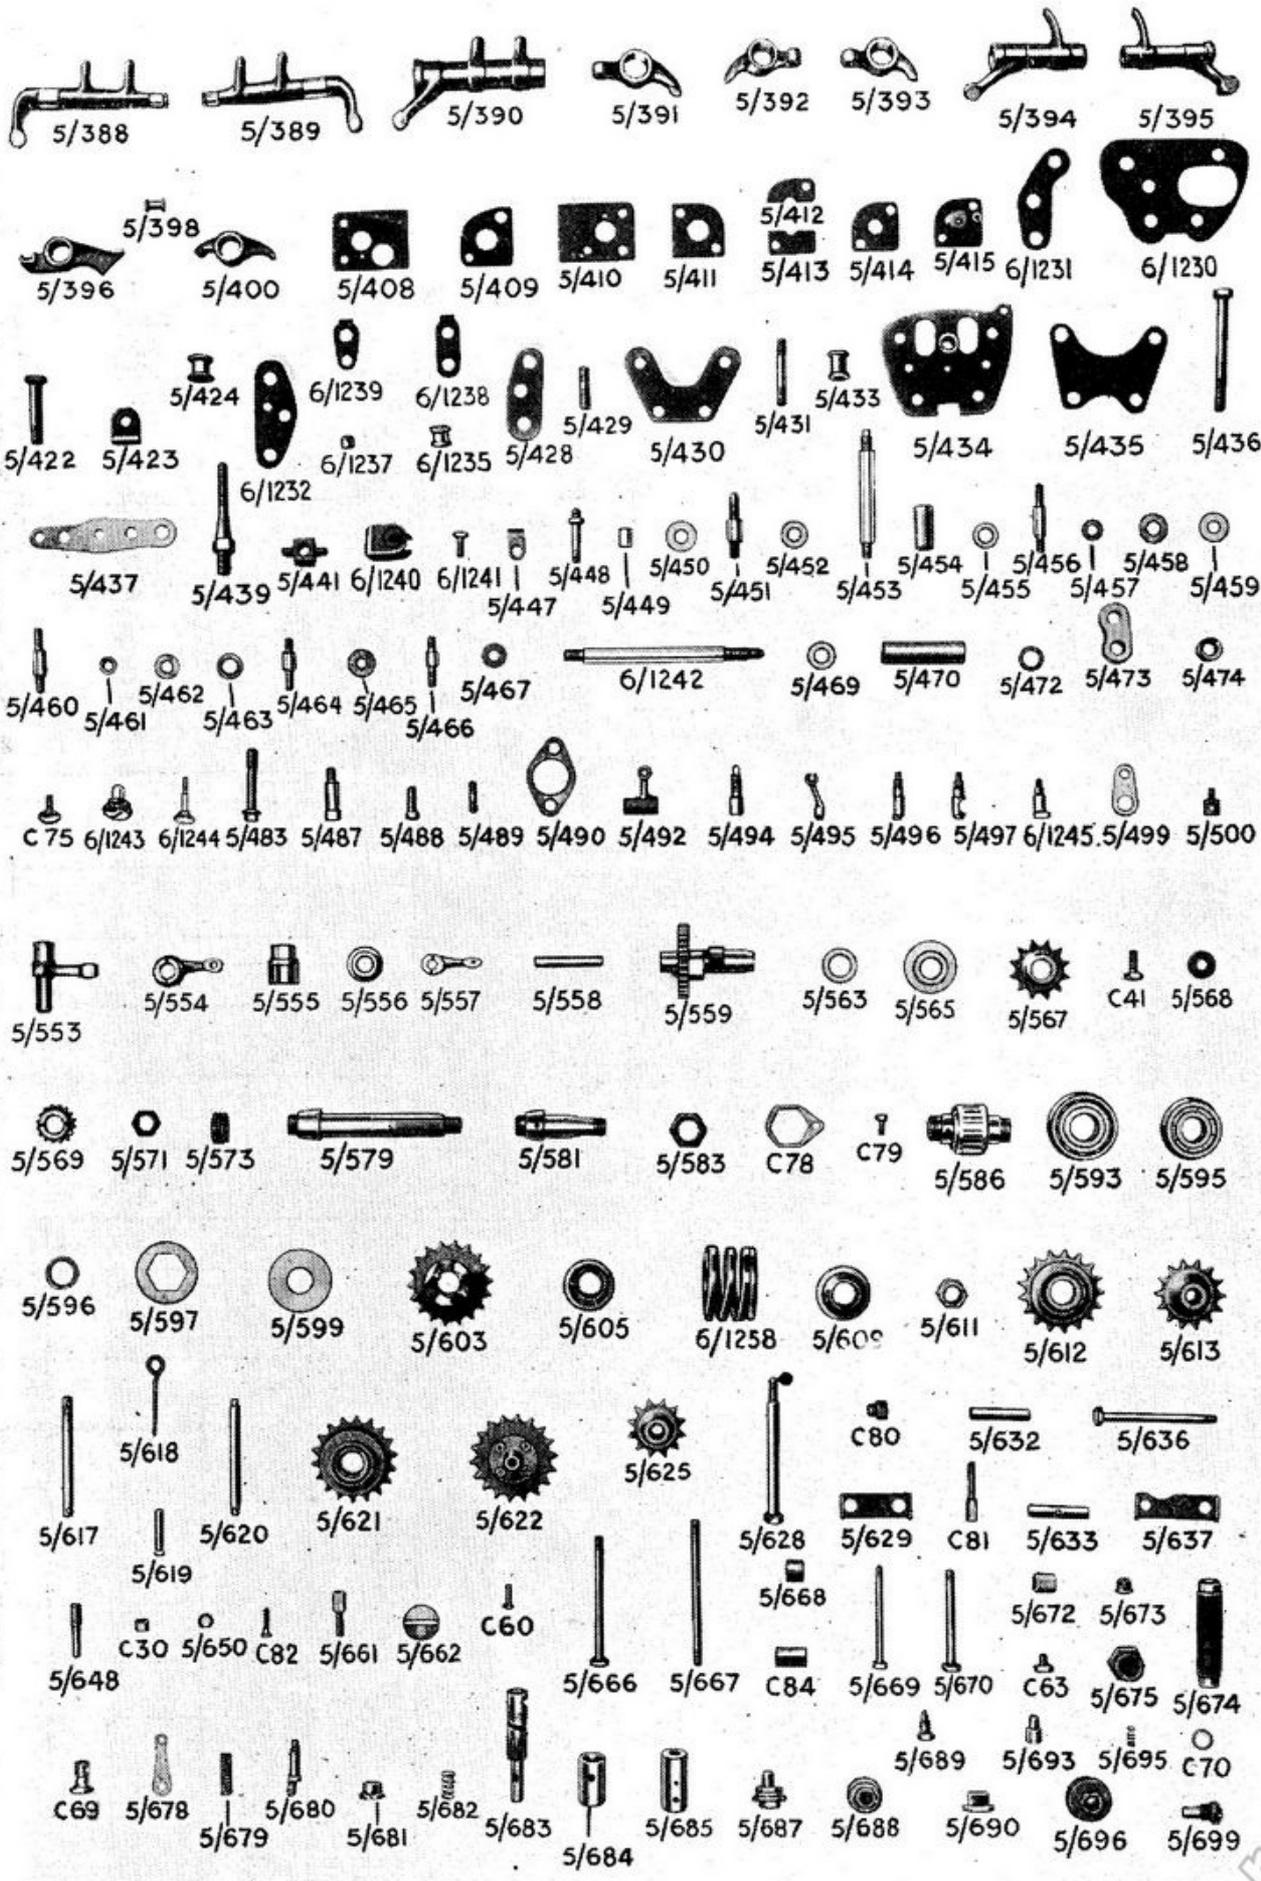

Please quote this number when ordering.

Serial Number Engine Group—Contd.

Price each £ s. d.

| 1936 Special Model | 1936 Ulster Model | 1936 250 c.c. Sports Model | 1936 250 c.c. Rapid Model |
|--------------------|-------------------|----------------------------|---------------------------|
|--------------------|-------------------|----------------------------|---------------------------|

Number required per machine.

| | | | | | | |
|--------|--|--------|---|---|---|---|
| 5/526 | Valve tappet cup M4427x1 | 5 | 2 | 2 | 2 | 2 |
| 5/527 | " " guide M3336x3 | 1 9 | 2 | 2 | — | — |
| 5/528 | " " " M3137x3 | 1 6 | — | — | 2 | 2 |
| 5/529 | " rod M3027x11 | 1 0 | 2 | 1 | — | — |
| 6/1246 | " (exhaust) M3027x7 | 1 6 | — | 1 | — | — |
| 5/532 | " " M3027x10 | 1 0 | — | — | 2 | — |
| 5/533 | " " M3027x14 | 1 0 | — | — | — | 2 |
| 5/534 | Tappet tube (top) M2992x2 with peg M3159x2 | 2 0 | 1 | — | — | — |
| 5/535 | " " " M2992x2 " " M3927x2 | 2 0 | — | 1 | — | — |
| 5/536 | " " " M4171x2 " " M3159x2 | 2 0 | — | — | 1 | — |
| 5/537 | " " " M2992x9 " " M3159x2 | 2 0 | — | — | — | 1 |
| 5/538 | " " (bottom) M2992x3 with plate | 3 6 | 1 | — | — | — |
| 5/539 | " " " M2992x8 " " " | 3 6 | — | 1 | — | — |
| 5/540 | " " " M2992x7 " " " | 3 0 | — | — | 1 | 1 |
| C67 | " " fixing screw M2528x4 | 3 | 1 | 1 | — | — |
| C25 | " " " washer 1769x5 | 1/2 | 1 | 1 | — | — |
| 5/541 | " " " stud M3159x4 | 2 | — | — | 1 | 1 |
| C19 | " " " nut M4524x1 | 1 | — | — | 1 | 1 |
| C25 | " " " washer 1769x5 | 1/2 | — | — | 1 | 1 |
| 5/542 | " " " packing piece M3159x3 | 1 6 | — | — | 1 | 1 |
| 6/1247 | Piston (full-skirted) M4128x2 | 14 3 | 1 | — | — | — |
| 6/1248 | " (slipper) M4678x1 | 15 3 | — | 1 | — | — |
| 5/545 | " " M4464x1 | 14 6 | — | — | 1 | — |
| 6/1249 | " (full-skirted) M4805x1 | 10 6 | — | — | — | 1 |
| 6/1250 | " ring M4720x2 | 1 9 | 2 | — | — | — |
| 5/547 | " " M2223x5 | 1 9 | — | 2 | — | — |
| 5/548 | " " M3112x4 | 1 6 | — | — | 2 | — |
| 6/1251 | " " M4720x1 | 1 6 | — | — | — | 2 |
| 5/549 | Gudgeon pin M2057x2 with end pads | 3 0 | 1 | 1 | — | — |
| 5/550 | " " M3112x2 | 2 6 | — | — | 1 | 1 |
| 6/1252 | Connecting rod M4542x1 | 17 6 | 1 | 1 | — | — |
| 5/552 | " " M4161x1 | 14 9 | — | — | 1 | 1 |
| *5/553 | Internal exhaust rocker M2973x2 with pin M2973x3 and end piece M2973x4 | 9 6 | 1 | 1 | — | — |
| *5/554 | Internal inlet rocker M2973x1 | 3 6 | 1 | 1 | — | — |
| *5/555 | rocker pin bush (in crankcase) M2973x5 | 3 6 | 1 | 1 | — | — |
| *5/556 | Internal rocker pin bush (in timing cover) M2973x6 | 1 0 | 1 | 1 | — | — |
| *5/557 | Internal rocker M3130x7 | 3 6 | — | — | 2 | 2 |
| *5/558 | " " pin M3130x2 | 1 0 | — | — | 1 | 1 |
| *5/559 | Camshaft M2972x1 with gear wheel M3872x4 | 16 6 | 1 | — | — | — |
| 5/560 | " M2985x1 " " M3872x4 | 16 6 | — | 1 | — | — |
| 5/561 | " M4193x1 " " M3872x5 | 15 6 | — | — | 1 | — |
| 5/562 | " M4193x2 " " M3872x5 | 13 9 | — | — | — | 1 |
| *5/563 | " bush (in crankcase) M2692x8 | 2 3 | 1 | 1 | — | — |
| 5/564 | " " M3106x7 | 2 0 | — | — | 1 | 1 |
| *5/565 | " " (in timing cover) M2719x2 | 2 6 | 1 | 1 | — | — |
| 5/566 | " " M3130x6 | 2 6 | — | — | 1 | 1 |
| *5/567 | " mag. chain sprocket M2978x1 | 2 6 | 1 | 1 | — | — |
| *C41 | " " " lock screw M2702x9 | 3 | 1 | 1 | — | — |
| *5/568 | Camshaft mag. chain sprocket lock screw washer M2702x18 | 1 | 1 | 1 | — | — |
| *5/569 | Driving pinion for R.H. axle M3575x3 | 4 0 | 1 | 1 | — | — |
| 5/570 | " " " M3623x1 | 4 0 | — | — | 1 | 1 |
| *5/571 | " " nut M2883x6 | 4 | 1 | 1 | — | — |
| 5/572 | " " M3106x3 | 4 | — | — | 1 | 1 |
| *5/573 | " worm for oil pump M3575x2 | 4 0 | 1 | 1 | — | — |
| 5/574 | " " M3623x2 | 4 0 | — | — | 1 | 1 |
| 6/1253 | Right hand flywheel M4543x1 | 1 0 0 | 1 | 1 | — | — |
| 6/1254 | Left hand flywheel M4543x2 | 1 0 0 | 1 | 1 | — | — |
| 5/577 | Right hand flywheel M4160x1 | 13 0 | — | — | 1 | 1 |
| 5/578 | Left hand flywheel M4160x2 | 13 0 | — | — | 1 | 1 |
| *5/579 | " " axle M3479x1 | 10 6 | 1 | 1 | — | — |
| 5/580 | " " M3860x1 | 9 6 | — | — | 1 | 1 |
| *5/581 | Right hand axle M3575x4 | 5 6 | 1 | 1 | — | — |
| 5/582 | " " M3623x3 | 5 | — | — | 1 | 1 |
| *5/583 | Axle nut M1668x5 | 8 | 2 | 2 | — | — |
| 5/584 | " " M3104x2 | 6 | — | — | 2 | 2 |
| *C78 | " " locking plate M1668x6 | 2 | 2 | 2 | — | — |
| 5/585 | " " " M3104x3 | 2 | — | — | 2 | 2 |
| *C79 | " " " screw M4523x1 | 1 | 2 | 2 | 2 | 2 |
| *5/586 | Crank pin built up with cage and double row of rollers | 1 8 6 | 1 | — | — | — |
| 6/1255 | Crank pin built up with cage and three rows of rollers | 1 10 0 | — | 1 | — | — |
| 5/587 | Crank pin built up with cage and double row of rollers | 1 7 6 | — | — | 1 | 1 |
| 5/588 | Crank pin nut M3774x3 | 9 | 2 | 2 | — | — |
| 5/589 | " " M1668x9 | 8 | — | — | 2 | 2 |
| 6/1256 | " " spacing washer M4542x2 | 2 3 | 2 | 2 | — | — |
| 5/591 | " " " M4161x2 | 2 3 | — | — | 2 | 2 |

www.rpw.it

Please quote this number when ordering.

Serial Number

Engine Group—Contd.

Price each
£ s. d.

1936 Special Model
1936 Ulster Model
1936 250 c.c. Sports Model
1936 250 c.c. Rapid Model

Number required per machine.

| Serial Number | Engine Group—Contd. | Price each £ s. d. | 1936 Special Model | 1936 Ulster Model | 1936 250 c.c. Sports Model | 1936 250 c.c. Rapid Model | |
|---------------|---|-----------------------|--------------------|-------------------|----------------------------|---------------------------|---|
| 5/592 | Crank pin nut locking plate M4078x1 ... | 2 | 2 | 2 | — | — | |
| C78 | " " " " " M1668x6 ... | 2 | — | — | 2 | 2 | |
| C79 | " " " " " screw M4523x1 ... | 1 | 2 | 2 | 2 | 2 | |
| *5/593 | Crankcase main roller bearing 4 MRJ 7/8" ... | 18 0 | 2 | — | — | — | |
| 6/1257 | " " " " " 6 MRJ 7/8" ... | 19 0 | — | 2 | — | — | |
| 5/594 | " " " " " R.M.C. 22 ... | 14 6 | — | — | 2 | 2 | |
| *5/595 | " ball bearing MC. 22 ... | 10 9 | 1 | 1 | — | — | |
| *5/596 | " bearing spacing ring M2884x2 ... | 6 | 1 | 1 | — | — | |
| *5/597 | " lock ring M2884x3 ... | 1 0 | 1 | 1 | — | — | |
| 5/598 | " lock screw M3029x1 ... | 1 | 1 | 1 | — | — | |
| *5/599 | " thrust washer R.H. M2423x9 ... | 4 | 1 | 1 | — | — | |
| 5/600 | " " " " " L.H. M3058x1 ... | 3 | 1 | 1 | — | — | |
| 5/601 | " " " " " M3106x9 ... | 4 | — | — | 2 | 2 | |
| 5/602 | " " " " " packing washer M1937x6 or 7 ... | 1 | As Required | | | | — |
| *5/603 | 18T chain ring M2357x2 for engine shaft ... | 6 6 | 1 | 1 | — | — | |
| 5/604 | 17T " " M3860x2 " " " " ... | 6 0 | — | — | 1 | 1 | |
| *5/605 | Shock absorber L238x7 with spring container M2357x5 ... | 2 6 | 1 | 1 | — | — | |
| 5/606 | Shock absorber L238x7 with spring container L238x9 ... | 2 6 | — | — | 1 | 1 | |
| *6/1258 | Shock absorber spring M4480x1 ... | 3 6 | 1 | 1 | — | — | |
| 5/608 | " " " " " L239x3 ... | 3 0 | — | — | 1 | 1 | |
| *5/609 | " " " " " stop M2423x6 ... | 1 0 | 1 | 1 | — | — | |
| 5/610 | " " " " " L239x1 ... | 9 | — | — | 1 | 1 | |
| *5/611 | L.H. axle nut L239x2 ... | 5 | 1 | 1 | 1 | 1 | |
| *5/612 | Dynamo driving sprocket M3523x3 ... | 4 6 | 1 | 1 | — | — | |
| *5/613 | " sprocket M3523x4 ... | 4 0 | 1 | 1 | — | — | |
| 5/614 | " driving chain 40 links 1/2"x.305"x.192" ... | 2 0 | 1 | 1 | — | — | |
| 5/615 | " felt washer M2132x9 ... | 2 | 1 | 1 | — | — | |
| 5/616 | " fixing strap M2967x3 ... | 2 6 | 1 | 1 | — | — | |
| *5/617 | " " " " " pin M2967x4 ... | 3 | 1 | 1 | — | — | |
| *5/618 | " " " " " eye bolt M2967x2 ... | 2 | 2 | 2 | — | — | |
| *5/619 | " " " " " nut M3241x1 ... | 4 | 2 | 2 | — | — | |
| C10 | " " " " " spring washer ... | 1/2 | 2 | 2 | — | — | |
| *5/620 | " " " " " distance piece M2967x1 ... | 3 | 1 | 1 | — | — | |
| *5/621 | Maglita driving sprocket M3858x1 ... | 4 6 | — | — | 1 | 1 | |
| *5/622 | " sprocket M3951x2 complete ... | 4 9 | — | — | — | — | |
| 5/623 | " driving chain 44 links 1/2"x.305"x.192" ... | 2 2 | — | — | 1 | 1 | |
| 5/624 | " felt washer M2132x10 ... | 6 | — | — | 1 | 1 | |
| *5/625 | Magneto sprocket M2978x2 ... | 2 6 | 1 | 1 | — | — | |
| 5/626 | " driving chain 36 links 1/2"x.305"x.1/8" ... | 1 9 | 1 | 1 | — | — | |
| 6/1259 | " table M4851x1 ... | 1 9 | 1 | 1 | — | — | |
| *5/628 | " " " " " bolt M4283x1 ... | 6 | 2 | 2 | — | — | |
| *C80 | " " " " " nut M2981x2 ... | 3 | 2 | 2 | — | — | |
| *5/629 | " " " " " locking plate M4283x2 ... | 1 | 1 | 1 | — | — | |
| 5/630 | " felt washer M2132x11 ... | 6 | 1 | 1 | — | — | |
| 6/1260 | " fixing strap M3223x8 ... | 9 | 1 | 1 | — | — | |
| *C81 | " " " " " bolt M1867x7 ... | 3 | 1 | 1 | — | — | |
| *5/632 | " " " " " pin (front) M3223x3 ... | 2 | 1 | 1 | — | — | |
| *5/633 | " " " " " (rear) M3223x2 ... | 2 | 1 | 1 | — | — | |
| 5/634 | " base dowel M3223x4 ... | 2 | 2 | 2 | — | — | |
| 5/635 | Maglita table M3868x1 ... | 1 6 | — | — | 1 | 1 | |
| *5/636 | " " " " " bolt L280x13 ... | 4 | — | — | 1 | 1 | |
| C42 | " " " " " nut M4526x1 ... | 1 | — | — | 1 | 1 | |
| C23 | " " " " " spring washer ... | 1/2 | — | — | 1 | 1 | |
| *5/637 | " " " " " locking plate M3868x4 ... | 1 | — | — | 1 | 1 | |
| 5/638 | " fixing strap M4018x5 ... | 1 0 | — | — | 1 | 1 | |
| 5/639 | " " " " " pin M3223x5 ... | 2 | — | — | 2 | 2 | |
| C81 | " " " " " bolt M1867x7 ... | 3 | — | — | 2 | 2 | |
| 6/1261 | " clamping plate M4018x6 ... | 5 | — | — | 1 | 1 | |
| 5/640 | " base dowel M4018x4 ... | 2 | — | — | 2 | 2 | |
| 5/641 | High tension lead 15" ... | 6 | 1 | 1 | — | — | |
| 6/1262 | High tension lead 16" ... | 6 | 1 | 1 | 1 | 1 | |
| 6/1263 | Cylinder barrel M4163x2 ... | 2 5 0 | 1 | — | — | — | |
| 5/642 | " " " " " M4163x1 ... | 2 5 0 | — | 1 | — | — | |
| 6/1264 | " " " " " M4755x2 ... | 2 0 0 | — | — | 1 | — | |
| 6/1265 | " " " " " M4755x1 ... | 2 0 0 | — | — | — | 1 | |
| 5/645 | " compression plate M2959x7 ... | 1 0 | 1 | 1 | — | — | |
| 5/646 | " " " " " M2959x6 ... | 1 2 | — | 1 | — | — | |
| *5/648 | " base stud M2953x4 ... | 2 | 6 | 6 | — | — | |
| 5/649 | " " " " " M4255x1 ... | 2 | — | — | 4 | 4 | |
| *C30 | " " " " " nut 654x9 ... | 1 | 6 | 6 | 4 | 4 | |
| *5/650 | " " " " " washer M1855x4 ... | 1 | 6 | 6 | 4 | 4 | |
| 5/651 | " " " " " joint washer (paper) M4206x1 ... | 1 | 2 | 3 | — | — | |
| 5/652 | " " " " " M4206x2 ... | 1 | — | — | 1 | 2 | |
| 5/653 | Crankcase R.H. half M2954x3 with studs ... | 2 0 0 | 1 | 1 | — | — | |
| 5/654 | " L.H. half M2879x2 " " ... | 1 10 0 | 1 | 1 | — | — | |
| 5/655 | " R.H. half M4405x1 " " ... | 1 10 0 | — | — | 1 | 1 | |
| 5/656 | " L.H. half M4406x1 " " ... | 1 0 0 | — | — | 1 | 1 | |
| 5/657 | Timing gear cover M2953x1 ... | 11 6 | 1 | 1 | — | — | |
| 5/658 | " " " " " M3503x3 ... | 8 6 | — | — | 1 | 1 | |
| *C82 | " " " " " screw (countersunk head) M2745x2 ... | 3 | 4 | 4 | 6 | 6 | |

www.rpw.it

Please quote this number when ordering.

| Serial Number | Engine Group—Contd. | Price each £ s. d. | 1936 | 1936 | 1936 | 1936 |
|---------------|--|-----------------------|------------------------------|--------|-----------------|----------------|
| | | | Special | Ulster | 250 c.c. Sports | 250 c.c. Rapid |
| | | | Model | Model | Model | Model |
| | | | Number required per machine. | | | |
| C66 | Timing gear cover screw (flat head) M2745x12 | 3 | 2 | 2 | — | — |
| C83 | " " " " spring washer (shakeproof) | 1/2 | 2 | 2 | — | — |
| 5/659 | " " " " joint M3659x1 ... | 4 | 1 | 1 | — | — |
| 5/660 | " " " " M3659x2 ... | 4 | — | — | 1 | 1 |
| *5/661 | " " " " shield attachment screw M4214x1 ... | 5 | 1 | 1 | — | — |
| *5/662 | " " " " cap M3887x4 ... | 1 0 | — | — | 1 | 1 |
| C62 | " " " " washer M2723x3 ... | 1 | — | — | — | — |
| 5/663 | Magneto chain cover M3963x1 ... | 3 9 | 1 | 1 | — | — |
| *C60 | " " " " screw M2745x9 ... | 3 | 4 | 4 | — | — |
| 5/664 | " " " " joint M3659x4 ... | 6 | 1 | 1 | — | — |
| 5/665 | Crankcase bolt (short) L280x13 ... | 6 | 3 | 3 | — | — |
| *5/666 | " " (long) L280x16 ... | 6 | 1 | 1 | — | — |
| *5/667 | " " stud (bottom front) M2984x4 ... | 6 | 1 | 1 | — | — |
| *5/668 | " " distance piece M2984x3 ... | 2 | 1 | 1 | — | — |
| *C84 | " " bolt M2981x1 (top rear) ... | 4 | 1 | 1 | — | — |
| C42 | " " " " M4526x1 ... | 1 | 5 | 5 | — | — |
| C23 | " " spring washer ... | 1/2 | 5 | 5 | — | — |
| *5/669 | " " M3167x8 ... | 6 | — | — | 2 | 2 |
| C19 | " " nut M4524x1 ... | 1 | — | — | 1 | 1 |
| *5/672 | " " " " M3864x1 (front top) ... | 4 | — | — | 1 | 1 |
| C20 | " " spring washer ... | 1/2 | — | — | 1 | 1 |
| *5/670 | " " long L280x27 ... | 6 | — | — | 1 | 1 |
| 5/671 | " " L280x28 ... | 6 | — | — | 2 | 2 |
| 6/1266 | " " and undershield bolt L280x29 ... | 6 | — | — | 1 | 1 |
| C42 | " " bolt nut M4526x1 ... | 1 | — | — | 3 | 3 |
| C23 | " " bolt spring washer ... | 1/2 | — | — | 3 | 3 |
| *C63 | " " drain plug M1176x3 ... | 3 | 1 | 1 | 1 | 1 |
| *5/673 | " " sump drain plug M2678x4 ... | 3 | 1 | 1 | 1 | 1 |
| C63 | " " " " L.H. M1176x3 ... | 3 | — | — | 1 | 1 |
| *5/674 | " " " " filter M2663x5 ... | 9 | 1 | 1 | — | — |
| 5/675 | " " " " cap M2663x4 ... | 9 | 1 | 1 | — | — |
| 5/676 | " " and timing cover dowel M2884x8 ... | 2 | 2 | 2 | 2 | 2 |
| *C69 | " " air release plug M2690x1 ... | 6 | 1 | 1 | 1 | 1 |
| C70 | " " " " washer M2690x8 ... | 1 | 2 | 2 | 2 | 2 |
| 5/677 | " " " " pipe with end piece M2690x11 ... | 1 6 | 1 | 1 | 1 | 1 |
| *5/678 | Decompressor lever M3063x3 ... | 6 | 1 | 1 | — | — |
| *5/679 | " " " " spring M3063x4 ... | 1 | 1 | 1 | — | — |
| *5/680 | " " " " pin M3063x1 ... | 9 | 1 | 1 | — | — |
| C19 | " " " " nut M4524x1 ... | 1 | 1 | 1 | — | — |
| C74 | " " " " washer M4536x1 ... | 1/2 | 1 | 1 | — | — |
| *5/681 | " " " " bush M3063x2 ... | 6 | 1 | 1 | — | — |
| *5/682 | " " " " actuating spring M3043x1 ... | 1 | 1 | 1 | — | — |
| *5/683 | Oil pump plunger M2995x1 ... | 7 6 | 1 | 1 | 1 | 1 |
| *5/684 | " " " " bush (large) M2995x3 ... | 1 3 | 1 | 1 | — | — |
| *5/685 | " " " " (small) M2995x2 ... | 1 6 | 1 | 1 | — | — |
| 5/686 | " " " " M3137x4 ... | 1 6 | — | — | 1 | 1 |
| *5/687 | " " " " end plug R.H. M2995x4 ... | 1 3 | 1 | 1 | — | — |
| *5/688 | " " " " M2995x5 ... | 10 | 1 | 1 | 2 | 2 |
| C62 | " " " " washer M2723x3 ... | 1 | 2 | 2 | 2 | 2 |
| *5/689 | " " " " operating peg M2898x4 ... | 4 | 1 | 1 | 1 | 1 |
| *5/690 | " " " " delivery union M3046x1 ... | 6 | 1 | 1 | — | — |
| 5/691 | " " " " " " washer M2884x4 ... | 1 | 1 | 1 | — | — |
| 5/692 | " " " " " " M3106x5 ... | 6 | — | — | 1 | 1 |
| *5/693 | " " " " " " sleeve M3046x2 ... | 9 | 1 | 1 | — | — |
| 5/694 | " " " " " " M3106x6 ... | 9 | — | — | 1 | 1 |
| *5/695 | " " " " " " spring M3162x1 ... | 1 | 1 | 1 | 1 | 1 |
| *5/696 | " " " " " " adaptor M3042x1 ... | 1 6 | 1 | 1 | — | — |
| 5/697 | " " " " " " washer M2996x6 ... | 1 | 1 | 1 | — | — |
| 5/698 | " " " " " " plug M3507x1 ... | 2 | — | — | 1 | 1 |
| *5/699 | " " " " " " tell tale M2118x10 complete ... | 1 9 | 1 | 1 | — | — |
| *C70 | " " " " " " washer M2690x8 ... | 1 | 1 | 1 | — | — |

GEAR BOX GROUP.

| | | | | | | |
|--------|---|-------|---|---|---|---|
| 5/700 | Gearbox body M2493x1 with operating mechanism cover L254x2 ... | 1 5 0 | 1 | 1 | — | — |
| 5/701 | Gearbox body M3118x1 with operating mechanism cover M3120x1 ... | 1 1 0 | — | — | 1 | 1 |
| *5/702 | Gearbox bracket bolt L284x6 ... | 6 | 2 | 2 | — | — |
| 5/703 | " " " " M3211x1 ... | 6 | — | — | 2 | 2 |
| C3 | " " " " nut M4525x1 ... | 2 | 2 | 2 | 2 | 2 |
| C4 | " " " " washer 148x22 ... | 1/2 | 2 | 2 | 2 | 2 |
| *C61 | " " filler cap M2995x5 ... | 1 0 | 1 | 1 | 1 | 1 |
| C62 | " " " " washer M2723x3 ... | 1 | 1 | 1 | 1 | 1 |
| *5/704 | " " drain plug M4505x2 ... | 3 | 1 | 1 | 1 | 1 |
| C70 | " " " " washer M2690x8 ... | 1 | 1 | 1 | 1 | 1 |
| *5/705 | " " adjuster M3670x1 & 2 with link M3436x2 ... | 6 6 | 1 | 1 | — | — |

www.tpw.co.uk

Please quote this number when ordering.

Serial Number


Gearbox Group—Contd.

Price each
£ s. d.

1936 Special Model
1936 Ulster Model
1936 250 c.c. Sports Model
1936 250 c.c. Rapid Model

Number required per machine.

| Serial Number | Description | Price each (£ s. d.) | 1936 Special Model | 1936 Ulster Model | 1936 250 c.c. Sports Model | 1936 250 c.c. Rapid Model |
|---------------|--|----------------------|--------------------|-------------------|----------------------------|---------------------------|
| *5/706 | Gearbox adjuster nut M3497x5 | 3 | 1 | 1 | — | — |
| *5/707 | " " M2492x7 & 9 | 10 | — | — | 1 | 1 |
| *5/708 | " " bridge M2492x12 | 6 | — | — | 1 | 1 |
| C19 | " " nut M4524x1 | 1 | — | — | 1 | 1 |
| 5/709 | " " end cover M2662x2 with bush L250x5 and bush L283x2 fitted | 1 0 0 | 1 | 1 | — | — |
| 5/710 | Gearbox end cover M3119x1 with bush M3121x2 and bush M3125x3 fitted | 17 6 | — | — | 1 | 1 |
| 5/711 | Gearbox end cover paper washer M3260x1 | 2 | 1 | 1 | — | — |
| 5/712 | " " " M3260x2 | 2 | — | — | 1 | 1 |
| *C59 | " " cover screw M2745x1 | 3 | 10 | 10 | 6 | 6 |
| *C85 | " " " M2745x11 (hex. head) | 3 | 4 | 4 | — | — |
| C103 | " " " M2745x8 | 3 | — | — | 1 | 2 |
| C86 | " " " washer M4531x1 " | 1/2 | 4 | 4 | — | 2 |
| C82 | " " " M2745x2 | 3 | — | — | 2 | 4 |
| C87 | " " " M2745x16 | 4 | — | — | 1 | — |
| C104 | " " " M2745x10 (flat head) | 3 | — | — | 1 | — |
| C105 | " " " M2745x17 | 4 | — | — | 1 | — |
| C37 | " " " nut 4124x9 | 2 | — | — | 2 | 2 |
| C20 | " " " spring washer | 1/2 | — | — | 2 | 2 |
| 5/713 | " " joint dowel M4500x1 | 1 | 2 | 2 | 2 | 2 |
| *5/714 | Clutch operating lever M4488x1 | 2 3 | 1 | 1 | — | — |
| 5/715 | " " " M4488x2 | 2 0 | — | — | 1 | 1 |
| *5/717 | " " " stud L251x3 | 2 | 1 | 1 | 1 | 1 |
| C37 | " " " nut 4124x9 | 2 | 1 | 1 | 1 | 1 |
| *5/718 | " " adjusting screw M4487x1 | 1 0 | 1 | 1 | 1 | 1 |
| C94 | " " " lock nut M4518x2 | 2 | 1 | 1 | 1 | 1 |
| *5/719 | " " " felt washer M3997x3 | 1 | 1 | 1 | 1 | 1 |
| *5/720 | " " operating rod (large) M4314x2 | 1 9 | 1 | 1 | — | — |
| *5/721 | " " " (long) M4317x3 | 8 | 1 | 1 | — | — |
| *5/722 | " " " (short) L498x6 | 7 | 1 | 1 | — | — |
| 5/723 | " " " (long) M3160x7 | 8 | — | — | 1 | 1 |
| 5/724 | " " " (short) L498x11 | 7 | — | — | 1 | 1 |
| *5/725 | Driving shaft M4404x1 with bush L481x4 | 15 9 | 1 | 1 | 1 | 1 |
| 5/726 | " " M3867x1 " M3160x1 | 13 6 | — | — | 1 | 1 |
| *5/727 | " " bush L481x4 | 6 | 1 | 1 | — | — |
| 5/728 | " " M3160x1 | 6 | — | — | 1 | 1 |
| *5/729 | " " felt washer L285x10 | 6 | 1 | 1 | — | — |
| 5/730 | " " M3160x4 | 4 | — | — | 1 | 1 |
| C72 | " " roller L148x9 | 1 | 20 | 20 | 35 | 35 |
| *5/731 | " " " ring L250x5 | 5 0 | 1 | 1 | — | — |
| 5/732 | " " " M3121x2 | 4 6 | — | — | 1 | 1 |
| *5/733 | " " " washer L283x5 | 6 | 1 | 1 | — | — |
| 5/734 | " " " M3121x6 | 6 | — | — | 1 | 1 |
| *5/735 | " " " ring M3645x3 | 6 | 1 | 1 | — | — |
| 5/736 | " " " M3861x1 | 6 | — | — | 1 | 1 |
| *5/737 | " " " washer M3645x5 | 1 | 1 | 1 | — | — |
| 5/738 | " " " M3861x2 | 1 | — | — | 1 | 1 |
| 6/1267 | " " " (leather) M4613x1 | 1 | — | — | 1 | 1 |
| *6/1268 | Fourth speed wheel M4403x1 with Oilite bushes fitted | 19 6 | 1 | 1 | — | — |
| 5/740 | Fourth speed wheel M3197x2 | 13 3 | — | — | 1 | 1 |
| *5/741 | " " " lock nut L249x3 | 9 | 1 | 1 | — | — |
| 5/742 | " " " M3129x2 | 8 | — | — | 1 | 1 |
| *5/745 | " " " thrust washer M1985x2 (large) | 1 0 | 1 | 1 | — | — |
| 5/746 | Fourth speed wheel thrust washer M3121x4 (large) | 1 0 | — | — | 1 | 1 |
| C73 | Fourth speed wheel roller (short) M1987x6 | 1 | 39 | 39 | 32 | 32 |
| 5/747 | " " " (long) L250x7 | 1 1/2 | — | — | 19 | 19 |
| *6/1269 | " " " bearing ring M4721x1 | 10 6 | 1 | 1 | — | — |
| 6/1270 | " " " M4696x1 | 10 0 | — | — | 1 | 1 |
| 6/1271 | " " " lock ring M4721x2 | 2 0 | 1 | 1 | — | — |
| 6/1272 | Fourth speed wheel bearing ring lock ring M4696x2 | 1 3 | — | — | 1 | 1 |
| 6/1273 | Fourth speed wheel bearing ring leather washer M4697x2 | 1 | 1 | 1 | — | — |
| 6/1274 | Fourth speed wheel bearing ring leather washer M4697x1 | 1 | — | — | 1 | 1 |
| *5/750 | Fourth speed wheel thrust washer L249x9 (small) | 9 | 1 | 1 | — | — |
| 5/751 | Fourth speed wheel thrust washer M3121x5 (small) | 7 | — | — | 1 | 1 |
| 5/753 | Fourth speed wheel roller distance piece M3129x4 | 3 | — | — | 1 | 1 |
| *5/754 | Driving sprocket 20T M3556x3 | 3 3 | 1 | 1 | — | — |
| 6/1275 | " " M3129x13 | 2 9 | — | — | 1 | 1 |
| *5/756 | Sliding gear wheel (pegged) M2584x1 | 7 6 | 2 | 2 | — | — |
| 5/757 | " " " M3197x4 | 7 0 | — | — | 2 | 2 |
| *5/758 | " " " (plain) M2584x2 | 6 0 | 2 | 2 | — | — |
| 5/759 | " " " M3122x1 | 5 6 | — | — | 2 | 2 |
| *5/760 | First speed wheel M4403x2 | 8 0 | 1 | 1 | — | — |

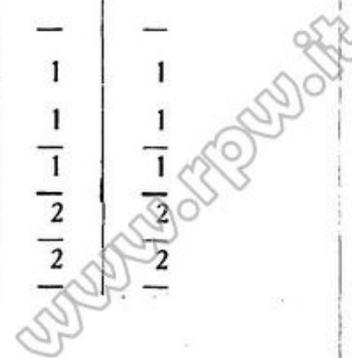

Please quote this number when ordering.

Serial Number Gearbox Group—Contd.


| Serial Number | Part Description | Part Number |
|---------------|--------------------------|------------------------|
| 5/761 | First speed wheel | M3189x4 |
| *5/762 | " " " washer | L250x4 |
| 5/763 | " " " " " | M3125x4 |
| *5/764 | Countershaft | M4308x2 |
| 5/765 | " " " " " | M3197x3 |
| C73 | " " " roller | M1987x6 |
| *5/766 | Right hand striking fork | M4310x2 with peg |
| 5/767 | " " " " " | M3202x3 |
| *5/768 | Left hand striking fork | M4310x1 " " " |
| 5/769 | " " " " " | M3202x4 |
| *5/770 | Right hand striking fork | plate M2565x8 with peg |
| 5/771 | Right hand striking fork | plate M3202x1 with peg |
| *5/772 | Left hand striking fork | plate M2565x7 with peg |
| 5/773 | Left hand striking fork | plate M3202x2 with peg |
| *5/774 | Striking fork bolt | M3798x2 |
| *5/775 | " " " locking plate | M3798x3 |
| 5/776 | " " " bush | L284x11 |
| 5/777 | " " " " " | M3202x5 |
| *5/778 | " " " " washer | L284x10 |
| *5/779 | Selector quadrant | M3990x1 |
| 5/780 | " " " " " | M3990x2 |
| *5/781 | " " " bush | M2594x2 |
| 5/782 | " " " " " | M3344x1 |
| 5/783 | " " " " locking screw | L251x5 |
| *5/784 | " " " " washer | L251x9 |
| C3 | " " " nut | M4525x1 |
| C5 | " " " " " | 2039x8 |
| 5/785 | " " " " " | 4231x7 |
| C88 | " " " " " | M3666x4 |

Price each £ s. d.

1936 Special Model 1936 Ulster Model 1936 250 c.c. Sports Model 1936 250 c.c. Rapid Model

Number required per machine.

| Price each (£ s. d.) | 1936 Special Model | 1936 Ulster Model | 1936 250 c.c. Sports Model | 1936 250 c.c. Rapid Model |
|----------------------|--------------------|-------------------|----------------------------|---------------------------|
| 6 9 | — | — | 1 | 1 |
| 10 | 1 | 1 | 1 | 1 |
| 8 | — | — | — | — |
| 12 6 | 1 | 1 | 1 | 1 |
| 10 9 | — | — | 1 | 1 |
| 1 | 15 | 15 | 14 | 14 |
| 1 0 | 1 | 1 | 1 | 1 |
| 9 | — | — | 1 | 1 |
| 1 0 | 1 | 1 | 1 | 1 |
| 9 | — | — | 1 | 1 |
| 2 3 | 1 | 1 | — | — |
| 2 3 | — | — | 1 | 1 |
| 2 3 | 1 | 1 | — | — |
| 2 3 | — | — | 1 | 1 |
| 2 2 | 2 | 2 | 2 | 2 |
| 1/2 | 1 | 1 | 1 | 1 |
| 3 | 2 | 2 | 2 | 2 |
| 3 | — | — | 2 | 2 |
| 1/2 | 2 | 2 | 2 | 2 |
| 10 0 | 1 | 1 | 1 | 1 |
| 9 6 | — | — | 1 | 1 |
| 2 3 | 1 | 1 | 1 | 1 |
| 2 0 | — | — | 1 | 1 |
| 2 | 1 | 1 | 1 | 1 |
| 1 | — | — | — | — |
| 2 | — | — | 1 | 1 |
| 1 | — | — | — | — |
| 2 | — | — | — | — |
| 1 | — | — | 1 | 1 |
| 6 | — | — | — | — |

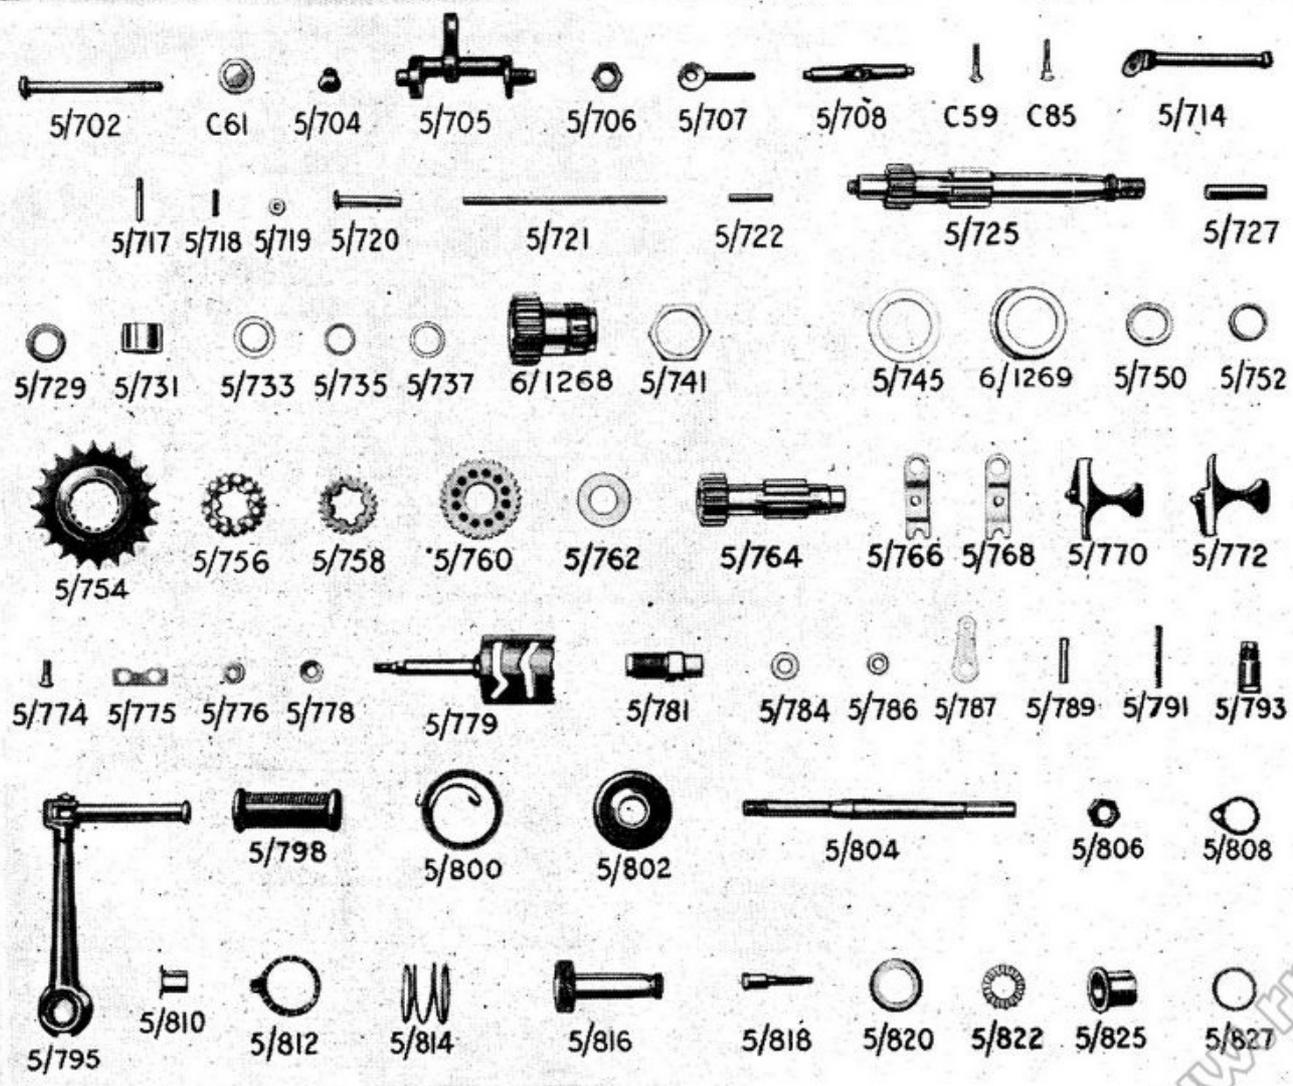

www.fpw.it

Please quote this number when ordering.

Serial Number

Gearbox Group—Contd.

Price each
£ s. d.


| 1936 Special | 1936 Ulster | 1936 250 c.c. Sports | 1936 250 c.c. Rapid |
|--------------|-------------|----------------------|---------------------|
| Model | Model | Model | Model |

Number required per machine.

| | | | | | | | | | |
|--------|-----------------------------|-----------------------------------|---------------|----------------|------|-----|---|----|----|
| C7 | Selector quadrant | spring washer | ... | ... | 1/2 | 1 | 1 | 1 | — |
| *5/786 | " | distance piece | M3444x2 | ... | 3 | 1 | — | — | — |
| *5/787 | " | operating lever | M4173x3 | ... | 10 | 1 | — | — | — |
| 5/788 | " | " | M4173x1 & 2 | ... | 3 0 | — | — | — | 1 |
| *5/789 | " | plunger | L523x5 | ... | 6 | 1 | 1 | — | — |
| 5/790 | " | " | M3127x3 | ... | 5 | — | — | 1 | 1 |
| *5/791 | " | " | spring | L523x6 | ... | 2 | 1 | 1 | — |
| 5/792 | " | " | " | 4549x7 | ... | 1 | — | 1 | 1 |
| *5/793 | " | " | sleeve | L523x3 | ... | 1 0 | 1 | 1 | — |
| 5/794 | " | " | " | M3127x4 | ... | 1 0 | — | — | 1 |
| *5/795 | Kick starter lever | M4266x1 with pin, bolt and washer | ... | ... | 10 6 | 1 | 1 | — | — |
| 5/796 | Kick starter lever | pin | M2740x4 | ... | 2 3 | 1 | 1 | — | — |
| 5/797 | " | bolt | M2673x7 | ... | 4 | 1 | 1 | — | — |
| *5/798 | " | rubber pad | ... | ... | 9 | 1 | 1 | — | — |
| 5/799 | " | " | M3916x1 | ... | 8 9 | — | — | 1 | 1 |
| *5/800 | " | return spring | M2751x1 | ... | 1 0 | 1 | 1 | — | — |
| 5/801 | " | " | M3124x3 | ... | 1 0 | — | — | 1 | 1 |
| *5/802 | " | " | carrier | M4165x1, 2 & 3 | 3 3 | 1 | 1 | — | — |
| 5/803 | " | " | " | M4211x1, 2 & 3 | 3 0 | — | — | 1 | 1 |
| C68 | " | lever screw | M2294x1 | ... | 2 | — | — | 1 | 1 |
| C25 | " | washer | 1769x5 | ... | 1/2 | — | — | 1 | 1 |
| *5/804 | " | spindle | M4134x2 | ... | 3 9 | 1 | 1 | — | — |
| 5/805 | " | " | M4179x2 | ... | 3 6 | — | — | 1 | 1 |
| *5/806 | " | " | nut | L283x7 | ... | 4 | 1 | 1 | — |
| 5/807 | " | " | " | M3124x4 | ... | 4 | — | 1 | 1 |
| *5/808 | " | " | locking plate | L283x9 | ... | 1 | 1 | — | — |
| C79 | " | " | " | " | ... | 1 | 1 | — | — |
| 5/809 | Kick starter spindle | nut locking screw | M3160x3 | ... | 1 | 1 | 1 | — | 1 |
| *5/810 | " | bearing | M1985x6 | ... | 3 0 | 1 | 1 | — | — |
| 5/811 | " | " | M3198x1 | ... | 2 9 | — | — | 1 | 1 |
| *5/812 | " | driving sleeve | L137x4 | ... | 3 6 | 1 | 1 | — | — |
| 5/813 | " | " | M3122x4 | ... | 3 3 | — | — | 1 | 1 |
| *5/814 | " | " | spring | L284x9 | ... | 3 | 1 | 1 | — |
| 5/815 | " | " | " | M3126x5 | ... | 3 | — | 1 | 1 |
| *5/816 | " | " | carrier | M4134x1 | ... | 9 0 | 1 | 1 | — |
| 5/817 | " | " | " | M4179x1 | ... | 9 0 | — | 1 | 1 |
| *5/818 | " | " | stop | L284x8 | ... | 6 | 1 | 1 | — |
| 5/819 | " | " | " | M3126x6 | ... | 4 | — | 1 | 1 |
| *5/820 | " | " | washer | M2673x4 | ... | 2 | 1 | 1 | — |
| 5/821 | " | " | " | M3126x1 | ... | 1 | — | 1 | 1 |
| C23 | " | " | spring washer | ... | 1/2 | — | — | 1 | 1 |
| *5/822 | " | " | bearing cage | L137x5 | ... | 2 0 | 1 | 1 | — |
| 5/823 | " | " | roller | .25" dia. | ... | 1/2 | 1 | 1 | — |
| 5/824 | " | " | " | M3126x4 | ... | 2 | — | 20 | 20 |
| *5/825 | " | " | carrier bush | L283x2 | ... | 5 0 | 1 | 1 | — |
| 5/826 | " | " | " | M3125x3 | ... | 4 9 | — | 1 | 1 |
| *5/827 | " | " | washer | ... | ... | 1/2 | 1 | 1 | — |
| 5/828 | Kick starter driving sleeve | carrier bush washer | M3126x2 | ... | 1/2 | — | — | 1 | 1 |

CLUTCH GROUP.

| | | | | | | | | | |
|--------|-----------------|---|-----|-----|--------|---|---|---|---|
| *5/829 | Back plate | M4417x1 with driving sleeve | ... | ... | 12 6 | 1 | 1 | — | — |
| *5/830 | Back plate | M2062x7 with driving sleeve | ... | ... | 9 6 | — | — | 1 | 1 |
| *5/831 | 45T chain wheel | M4421x1 with friction linings, flange, and inner bearing fitted | ... | ... | 1 12 3 | 1 | 1 | — | — |

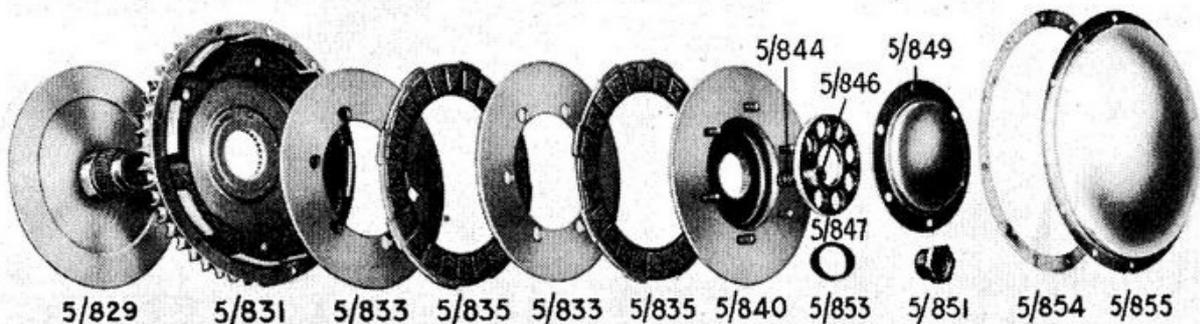

www.rpw.it


Please quote this number when ordering.

Serial Number Clutch Group—Contd.

Price each
£ s. d.

| 1936 Special Model | 1936 Ulster Model | 1936 250 c.c. Sports Model | 1936 250 c.c. Rapid Model |
|--------------------|-------------------|----------------------------|---------------------------|
|--------------------|-------------------|----------------------------|---------------------------|

| | | Number required per machine. | | | | | | |
|--------|--|------------------------------|----|-----|----|----|----|----|
| *5/832 | 43T chain wheel M2062x2 with friction linings, and inner bearing fitted | 1 | 1 | 0 | — | — | 1 | 1 |
| *5/833 | Driven plate M4420x1 | 1 | 1 | 9 | 2 | 2 | — | — |
| *5/834 | " " " M2062x5 | 1 | 1 | 6 | — | — | 1 | 1 |
| *5/835 | Driving plate M3460x2 with friction inserts | 6 | 6 | 0 | 2 | 2 | — | — |
| *5/836 | " " " M2062x6 with friction linings | 10 | 10 | 0 | — | — | 1 | 1 |
| 5/837 | Friction lining L330x4 | 3 | 3 | 6 | 2 | 2 | 4 | 4 |
| 5/838 | " " " rivet | 1 | 1 | 1 | 6 | 6 | 12 | 12 |
| 5/839 | " " " insert M3458x4 | 1 | 1 | 1 | 48 | 48 | — | — |
| *5/840 | Presser plate M4419x1 with studs M4419x2 fitted | 3 | 3 | 6 | 1 | 1 | — | — |
| *5/841 | Presser plate M2062x4 with studs M2063x7 fitted | 3 | 3 | 0 | — | — | 1 | 1 |
| 5/842 | Presser plate stud M4419x2 | 3 | 3 | 3 | 6 | 6 | — | — |
| 5/843 | " " " M2063x7 | 2 | 2 | 2 | — | — | 4 | 4 |
| C89 | " " " nut M4527x1 | 1 | 1 | 1 | 6 | 6 | 4 | 4 |
| C20 | " " " spring washer | 1 | 1 | 1/2 | 6 | 6 | 4 | 4 |
| *5/844 | Clutch spring M2013x8 | 1 | 1 | 1/2 | 8 | 8 | — | — |
| *5/845 | " " " M2013x10 | 1 | 1 | 1/2 | — | — | 8 | 8 |
| *5/846 | " " " thimble M3459x4 | 3 | 3 | 3 | 8 | 8 | 8 | 8 |
| *5/847 | " " " container M4418x1 | 1 | 1 | 0 | 1 | 1 | 1 | 1 |
| *5/849 | Operating plate M4417x2 | 1 | 1 | 9 | 1 | 1 | — | — |
| *5/850 | " " " M2063x3 with centre rivet | 1 | 1 | 0 | — | — | 1 | 1 |
| *5/851 | Clutch axle nut M4418x2 | 1 | 1 | 7 | 1 | 1 | — | — |
| *5/852 | " " " M3148x6 | 1 | 1 | 6 | — | — | 1 | 1 |
| *5/853 | " " " locking plate M2063x12 | 1 | 1 | 1/2 | 1 | 1 | 1 | 1 |
| *5/854 | Cork flange joint M4423x1 | 1 | 1 | 6 | 1 | 1 | — | — |
| *5/855 | Clutch outer cover M4422x1 | 1 | 1 | 6 | 1 | 1 | — | — |
| 5/856 | " " " screw M4423x2 | 1 | 1 | 1 | 12 | 12 | — | — |
| G9 | " " " nut 564x9 | 1 | 1 | 1 | 12 | 12 | — | — |

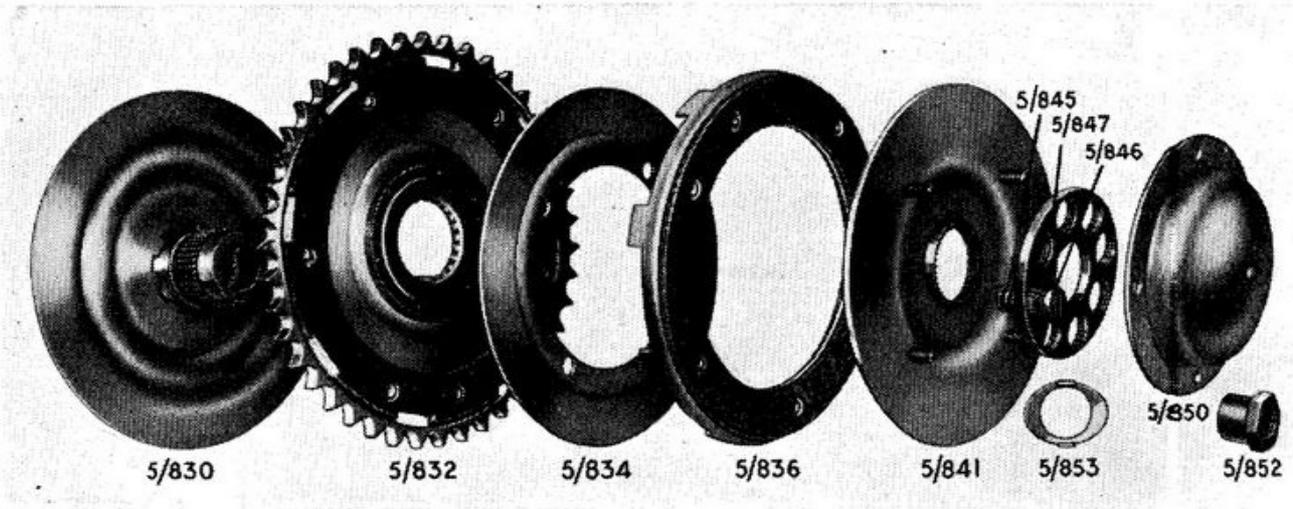

GEAR CONTROL GROUP.

| | | | | | | | |
|---------|--|---|---|-----|---|---|---|
| 5/857 | Hand control lever M4156x2 with knob | 6 | 6 | 1 | — | — | 1 |
| 5/858 | " " " knob M2792x1 | 1 | 1 | 2 | — | — | 1 |
| 5/859 | " " " pin M4028x4 | 1 | 1 | 6 | — | — | 1 |
| C23 | " " " spring washer | 1 | 1 | 1/2 | — | — | 1 |
| 5/860 | " " " " " (1/16") | 1 | 1 | 1 | — | — | 1 |
| 5/861 | " " " gate M4156x1 | 4 | 4 | 6 | — | — | 1 |
| C66 | " " " screw M2745x12 | 3 | 3 | 3 | — | — | 2 |
| C20 | " " " spring washer | 1 | 1 | 1/2 | 2 | — | 2 |
| 5/862 | " " " rod M1911x15 with forked joints | 2 | 2 | 6 | 1 | — | — |
| 5/863 | " " " " M1911x16 " " " | 3 | 3 | 6 | — | — | 1 |
| C90 | Forked joint pin M4519x1 | 2 | 2 | 2 | — | — | 2 |
| C25 | " " " washer 1769x5 | 1 | 1 | 1/2 | 2 | — | 2 |
| 5/864 | Foot control pedal M3577x1 | 5 | 5 | 0 | — | 1 | — |
| 5/865 | " " " rubber M3605x3 | 1 | 1 | 6 | — | 1 | — |
| *6/1276 | Cross over shaft M4824x1 | 9 | 9 | 0 | — | 1 | — |
| 6/1277 | " " " M4828x1 | 9 | 9 | 0 | — | 1 | — |
| *5/868 | " " " bush M3641x2 with end plate | 2 | 2 | 0 | — | 1 | — |
| 5/869 | " " " M3859x2 | 1 | 1 | 9 | — | — | 1 |
| C38 | " " " locking screw L538x8 | 1 | 1 | 2 | — | — | 1 |
| C19 | " " " " " nut M4524x1 | 1 | 1 | 1 | — | — | 1 |

www.rpw.it

Please quote this number when ordering.

Serial Number


Gear Control Group—Contd.

Price each £ s. d.

1936 Special Model 1936 Ulster Model 1936 250 c.c. Sports Model 1936 250 c.c. Rapid Model

Number required per machine.

| Serial Number | Description | Price each | 1936 Special Model | 1936 Ulster Model | 1936 250 c.c. Sports Model | 1936 250 c.c. Rapid Model |
|---------------|---|------------|--------------------|-------------------|----------------------------|---------------------------|
| C20 | Cross over shaft bush locking screw spring washer | 1/2 | — | — | — | — |
| *C11 | Cross over shaft nut M4107x3 | 6 | — | — | — | — |
| *5/870 | " " " distance piece M3478x8 | 3 | — | — | — | — |
| 5/871 | " " " " M3859x4 | 4 | — | — | — | — |
| *5/872 | Foot control operating rod M4202x1 | 2 0 | — | — | — | — |
| 5/873 | " " " " M3859x5 | 6 | — | — | — | — |
| *5/874 | " " " " forked joint M3428x4 | 1 0 | — | — | — | — |
| C30 | " " " " lock nut 654x9 | 1 | — | — | — | — |
| C90 | Foot control operating rod forked joint pin M4519x1 | 2 | — | — | — | — |
| C25 | Foot control operating rod forked joint pin washer 1769x5 | 1/2 | — | — | — | — |
| *5/875 | Foot control swivel M3605x2 | 9 | — | — | — | — |
| 5/876 | " " " bolt M2599x8 | 3 | — | — | — | — |
| C37 | " " " nut 4124x9 | 2 | — | — | — | — |
| C20 | " " " " spring washer | 1/2 | — | — | — | — |

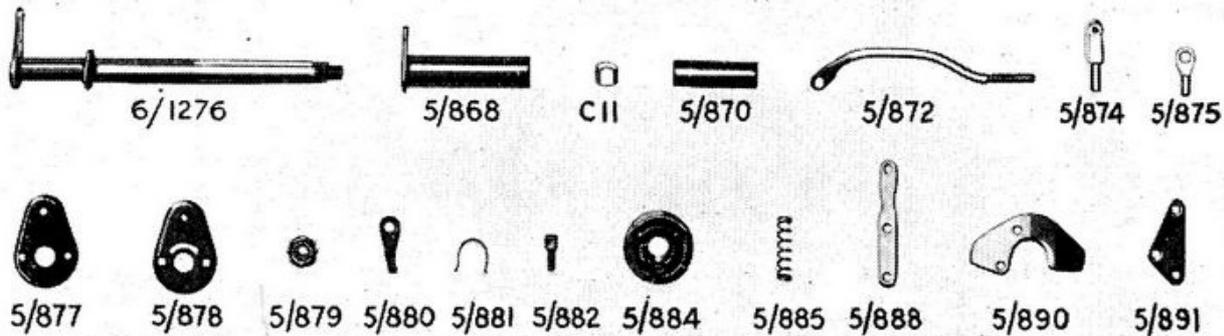

| Serial Number | Description | Price each | 1936 Special Model | 1936 Ulster Model | 1936 250 c.c. Sports Model | 1936 250 c.c. Rapid Model |
|---------------|-------------------------------------|------------|--------------------|-------------------|----------------------------|---------------------------|
| *5/877 | Control ratchet front plate M2594x6 | 3 0 | — | — | — | — |
| *5/878 | " " " back plate M2594x5 | 2 6 | — | — | — | — |
| *5/879 | " " " wheel M2594x3 | 1 9 | — | — | — | — |
| *5/880 | " " " pawl M2594x7 | 1 0 | — | — | — | — |
| *5/881 | " " " " spring M2595x2 | 3 | — | — | — | — |
| *5/882 | " " " stud M2594x8 | 8 | — | — | — | — |
| 5/883 | " " " bush M2594x9 | 2 | — | — | — | — |
| C19 | " " " nut M4524x1 | 1 | — | — | — | — |
| C20 | " " " " spring washer | 1/2 | — | — | — | — |
| *5/884 | " " " body M4202x2 | 7 0 | — | — | — | — |
| *5/885 | " " " " spring M2594x11 | 3 | — | — | — | — |
| C91 | " " " ball bearing 1/2" diameter | 1 1/2 | — | — | — | — |
| *5/888 | " " " locking plate (top) M3057x1 | 9 | — | — | — | — |
| 5/889 | " " " " M4564x1 | 9 | — | — | — | — |
| *5/890 | " " " " (centre) M3057x2 | 9 | — | — | — | — |
| *5/891 | " " " " (bottom) M3057x3 | 7 | — | — | — | — |
| 5/892 | " " " " M3344x3 | 6 | — | — | — | — |
| C29 | " " " " bolt M4520x1 | 2 | — | — | — | — |
| C18 | " " " " nut M4524x1 | 1 | — | — | — | — |
| C36 | " " " body bolt M1097x3 | 3 | — | — | — | — |
| C19 | " " " " nut M4524x1 | 1 | — | — | — | — |
| C20 | " " " " spring washer | 1/2 | — | — | — | — |

HANDLEBAR AND CONTROLS GROUP.

| Serial Number | Description | Price each | 1936 Special Model | 1936 Ulster Model | 1936 250 c.c. Sports Model | 1936 250 c.c. Rapid Model |
|---------------|---|------------|--------------------|-------------------|----------------------------|---------------------------|
| 6/1278 | Handlebar M4816x2 less all fittings | 12 6 | — | — | — | — |
| 6/1279 | " " M4816x1 " " " | 12 6 | — | — | — | — |
| 6/1280 | " " M4674x1 " " " | 11 6 | — | — | — | — |
| 6/1281 | Amal exhaust lifter lever complete | 6 0 | — | — | — | — |
| 5/896 | Exhaust lifter cable (35" long) with nipples | 6 6 | — | — | — | — |
| 5/897 | " " " (37" long) " " | 6 6 | — | — | — | — |
| 5/898 | " " " (41" long) " " | 6 6 | — | — | — | — |
| 5/899 | " " " casing (30" long) | 1 6 | — | — | — | — |
| 5/900 | " " " " (32" long) | 1 8 | — | — | — | — |
| 5/901 | " " " " (36" long) | 1 9 | — | — | — | — |
| C92 | " " " nipple M4535x1 | 1 | — | — | — | — |
| C93 | " " " " M4536x2 | 1 | — | — | — | — |
| 5/902 | " " " adjuster M3082x1 | 5 | — | — | — | — |
| C94 | " " " " nut M4518x2 | 2 | — | — | — | — |
| 5/903 | " " " spring 4549x7 | 1 | — | — | — | — |
| 6/1282 | " " " " 4714x2 | 1 | — | — | — | — |
| 6/1283 | Amal combined short front brake and air levers complete | 10 6 | — | — | — | — |

www.rpw.it

Please quote this number when ordering.

| Serial Number | Handlebar and Controls Group— Contd. | Price each £ s. d. |
|---------------|--|-----------------------|
| 6/1284 | Amal combined long front brake and air levers complete | 12 0 |
| 5/904 | Front brake cable (45" long) with nipples | 7 7 |
| 5/905 | " " " (44" long) " " | 1 3 |
| 5/906 | " " " casing, 25" long " " | 1 3 |
| C95 | " " " nipple M4511x1 " " | 1 3 |
| 5/907 | " " " Exonite cover " " | 1 6 |
| 6/1285 | " " " adjuster M4671x1 " " | 1 3 |
| 5/908 | " " " " M2274x8 " " | 5 2 |
| 5/909 | " " " " nut M2274x9 " " | 2 2 |
| 5/910 | " " " stirrup M2279x3 " " | 2 1/2 |
| C96 | " " " " pin M4503x1 " " | 1 6 |
| C25 | " " " " washer 1769x5 " " | 1 6 |
| 6/1286 | Amal combined clutch and ignition levers complete | 10 6 |
| 5/912 | Clutch control cable 50" long with nipples | 8 8 |
| 5/913 | " " " 51" long " " | 2 0 |
| 5/914 | " " " casing 46" long " " | 1 1 |
| C92 | " " " nipple M4535x1 " " | 4 4 |
| 5/915 | " " " guide L251x14 " " | 2 2 |
| C37 | " " " " nut 4124x9 " " | 3 3 |
| 5/916 | " " " stop thimble M1782x5 " " | 7 7 |
| 5/918 | Ignition control cable 45 1/2" long with nipples | 1 10 |
| 5/919 | " " " 42" long " " | 1 9 |
| 5/920 | " " " casing 40 1/2" long " " | 7 0 |
| 5/921 | " " " " 37" long " " | 7 0 |
| 6/1287 | Amal throttle twist grip complete (less cable) | 1 6 |
| 6/1288 | Binks " " " " " " " " | 1 6 |
| 6/1289 | Amal dummy grip for left hand " " " " | 1 6 |
| 6/1290 | Binks " " " " " " " " | 1 6 |

| 1936 Special Model | 1936 Ulster Model | 1936 250 c.c. Sports Model | 1936 250 c.c. Rapid Model |
|------------------------------|-------------------|----------------------------|---------------------------|
| Number required per machine. | | | |

BRAKES GROUP.

| | | |
|--------|--|-------|
| 5/925 | Rear brake pedal M3839x2 | 6 0 |
| 5/926 | " " " M3182x1 | 5 6 |
| *5/927 | " " " return spring M2306x3 | 2 2 |
| 5/928 | " " " L594x8 | 1 6 |
| *5/929 | " " " bolt M3839x3 | 1 3 |
| 5/930 | " " " L594x6 | 1 6 |
| C12 | " " " nut M4107x1 | 1 1/2 |
| C7 | " " " spring washer 3/8" | 1 1 |
| C8 | " " " washer M4529x1 | 9 9 |
| 5/931 | " " " distance piece L318x15 | 4 4 |
| 5/932 | " " " M2474x20 | 2 2 |
| C1 | " " " nut L280x4 | 2 1/2 |
| C2 | " " " spring washer 1/16" | 2 2 |
| C90 | " " " lever pin M4519x1 | 3 3 |
| C96 | " " " M4503x1 | 1 1/2 |
| C25 | " " " washer 1769x5 | 1 6 |
| *5/933 | " " " bell crank lever M3638x1 with peg | 1 0 |
| *5/934 | " " " " bolt M2963x1 | 1 6 |
| *5/935 | " " " " nut M3666x4 | 1 1 |
| C6 | " " " washer M4529x1 | 1 1 |
| C7 | Rear brake bell crank lever bolt spring washer 3/8" | 2 1/2 |
| C1 | Rear brake bell crank lever bolt nut L280x4 | 1 1 |
| C97 | " " " " washer M1629x10 | 1 1 |
| C2 | Rear brake bell crank lever bolt spring washer 1/16" | 3 1/2 |
| C96 | Rear brake bell crank lever pin M4503x1 | 3 1/2 |
| C25 | " " " washer 1769x5 | 3 3 |
| *5/936 | " " " compression spring M2244x1 | 2 0 |
| 5/937 | " " " container M2284x1 | 8 8 |
| 5/938 | Rear brake compression spring container cap M2284x2 | 1 1 |
| C19 | Rear brake compression spring stop nut M4524x1 | 1 1 |
| 5/939 | Rear brake compression spring stop M2284x3 | 1 3 |
| 5/940 | " " long rod M3243x2 | 1 4 |
| 5/941 | " " short rod M4321x1 | 1 0 |
| 5/942 | " " " forked joint M1398x7 | 1 0 |
| 5/943 | " " " (short) M1398x8 | 1 3 |
| 5/944 | Rear brake rod M2284x8 | 1 1 |
| *5/946 | " " " spring M2306x2 | 2 2 |
| C37 | " " " nut 4124x9 | 4 4 |
| 5/947 | " " " bush M2244x12 | 6 6 |
| *5/948 | " " " adjusting nut M2244x13 | 6 6 |

www.rpw.it

Please quote this number when ordering.

Serial Number

Wheels Group—Contd.

Price each
£ s. d.

| 1936 Special | 1936 Ulster | 1936 250 c.c. Sports Model | 1936 250 c.c. Rapid Model |
|--------------|-------------|----------------------------|---------------------------|
|--------------|-------------|----------------------------|---------------------------|


| Serial Number | Description | Price each | Number required per machine. | | | |
|---------------|---|------------|------------------------------|----|----|----|
| C13 | Rear hub spindle spring washer ... | 1/2 | — | — | 2 | 2 |
| *6/1307 | Wheel spindle fixed cone M4730x3 ... | 2 3 | — | — | 2 | 2 |
| *6/1308 | " " adjusting cone M4731x1 ... | 2 6 | — | — | 2 | 2 |
| 6/1309 | " " distance piece M4717x1 ... | 6 | — | — | 2 | — |
| C110 | " " washer M4538x3 ... | 1 | — | — | 1 | 2 |
| C91 | 1/2" diameter ball bearings ... | 1 1/2 | — | — | 32 | 32 |
| 6/1310 | Hub spoke flange M3144x6 (front) ... | 2 6 | — | — | 1 | 1 |
| 6/1311 | " " M3140x6 (rear) ... | 2 9 | — | — | 1 | 1 |
| 6/1312 | " barrel M4692x1 ... | 1 6 | — | — | 2 | 2 |
| *6/1313 | " ball cup L.H. M4691x1 ... | 5 6 | — | — | 2 | 2 |
| *6/1314 | " " R.H. M4691x2 with oil retaining cup M4692x2 ... | 11 6 | — | — | 2 | 2 |
| 6/1316 | Hub brake drum M4280x2 ... | 7 6 | — | — | 2 | 2 |
| *5/1047 | " dust cover L.H. M3295x1 ... | 5 | 2 | 2 | — | — |
| *5/1048 | " " " felt washer M3295x4 ... | 2 | 2 | 2 | — | — |
| 5/1049 | " " " L.H. M3295x2 (front) ... | 5 | — | — | 1 | 1 |
| 5/1050 | " " " felt washer M3295x5 (front) ... | 2 | — | — | 1 | 1 |
| 5/1051 | " " " L.H. M3286x2 (rear) ... | 5 | — | — | 1 | 1 |
| 5/1052 | " " " felt washer M3286x3 (rear) ... | 6 | — | — | 1 | 1 |
| 5/1053 | Rear chain sprocket 38T M3556x1 ... | 8 6 | 1 | — | — | — |
| 5/1054 | " " " 36T M3556x7 ... | 8 0 | — | 1 | — | — |
| 5/1055 | " " " 45T M3556x6 (for S'car gears only) ... | 10 6 | 1 | 1 | — | — |
| 6/1317 | Rear chain sprocket 48T M3138x11 ... | 8 0 | — | — | 1 | 1 |
| C38 | " " " bolt L538x8 ... | 2 | 10 | 10 | 10 | 10 |
| C19 | " " " nut M4524x1 ... | 1 | 10 | 10 | 10 | 10 |
| C20 | " " " spring washer ... | 1/2 | 10 | 10 | 10 | 10 |
| *6/1318 | Knock out spindle (rear) M2997x4 with R.H. cam and tommy bar fitted ... | 6 6 | 1 | 1 | — | — |
| *5/1058 | L.H. cam M2997x8 with sleeve fitted ... | 1 6 | 1 | 1 | — | — |
| C43 | Knock out spindle nut M4528x1 (rear) ... | 2 | 1 | 1 | — | — |
| 6/1319 | " " washer M2997x7 ... | 1 | 1 | 1 | — | — |
| *5/1059 | Draw back M4327x1 ... | 6 | — | — | 2 | 2 |
| *C81 | " " bolt (long) M1867x7 ... | 3 | — | — | 1 | 1 |
| 5/1060 | " " (short) M3196x3 ... | 2 | — | — | 1 | 1 |
| *6/1320 | Knock out spindle M4489x1 (front) ... | 1 3 | 1 | 1 | — | — |
| C100 | " " " nut L558x7 (front) ... | 4 | 1 | 1 | — | — |
| *6/1321 | " " " sleeve R.H. M4489x2 ... | 1 0 | 1 | 1 | — | — |
| *5/1063 | " " " L.H. M2507x2 ... | 6 | 1 | 1 | — | — |

FOOT RESTS GROUP.

| | | | | | | |
|---------|--------------------------------------|-----|---|---|---|---|
| *5/1064 | Footrest support R.H. M3482x1 ... | 3 0 | 1 | 1 | — | — |
| 5/1065 | " " M3482x4 ... | 3 0 | 1 | 1 | 2 | 2 |
| *5/1066 | " " bolt R.H. M3482x2 ... | 4 | 1 | 1 | — | — |
| 5/1067 | " " " M3482x3 ... | 4 | 1 | 1 | 2 | 2 |
| *5/1068 | " " " nut M4379x1 ... | 9 | 2 | 2 | — | — |
| C12 | " " " M4107x1 ... | 6 | — | — | 2 | 2 |
| C101 | " " " washer M1671x7 ... | 1 | — | — | 2 | 2 |
| C7 | " " " spring washer ... | 1/2 | — | — | 2 | 2 |
| *5/1069 | " " " fixing bolt L313x3 ... | 3 | 2 | 2 | 2 | 2 |
| C1 | " " " nut L280x4 ... | 2 | 2 | 2 | 2 | 2 |
| C2 | " " " spring washer ... | 1/2 | 2 | 2 | 2 | 2 |
| *5/1070 | " " " crank M2266x11 ... | 2 0 | 2 | 2 | 2 | 2 |
| *5/1072 | " " " rubber M2266x8 ... | 1 3 | 2 | 2 | 2 | 2 |
| *5/1073 | Brake pedal stop M4181x1 ... | 2 | 1 | 1 | — | — |
| 5/1074 | " " " M3182x3 ... | 2 | — | — | 1 | 1 |
| 5/1075 | Mechanism shield M4223x1 ... | 7 6 | 1 | 1 | — | — |
| 6/1322 | " " " M4718x1 ... | 5 6 | — | — | 1 | 1 |
| *C75 | " " " fixing screw M2686x3 ... | 3 | 2 | 2 | 1 | 1 |
| 6/1323 | " " " footrest washer M4843x1 ... | 1 | — | — | 1 | 1 |
| 6/1324 | Pillion footrest spindle M4744x1 ... | 2 3 | 2 | 2 | 2 | 2 |
| *5/1070 | " " " crank M2266x11 ... | 2 0 | 2 | 2 | 2 | 2 |
| *5/1072 | " " " rubber M2266x8 ... | 1 3 | 2 | 2 | 2 | 2 |
| *5/1068 | " " " spindle nut M4379x1 ... | 9 | 2 | 2 | 2 | 2 |

SADDLE GROUP.

| | | | | | | |
|---------|---|------|---|---|---|---|
| 5/1076 | "Lycett" soft top saddle with springs ... | 16 0 | 1 | — | — | — |
| 6/1325 | " " " " " (including sorbo pad) ... | 19 6 | — | 1 | — | — |
| 5/1077 | "Lycett" soft top saddle with springs ... | 13 0 | — | — | 1 | 1 |
| *5/1078 | Peak clip M2550x1 ... | 6 | 1 | 1 | 1 | 1 |
| *C58 | " " bolt M2550x3 ... | 4 | 1 | 1 | 1 | 1 |
| C42 | " " nut M4526x1 ... | 1 | 1 | 1 | 1 | 1 |
| C46 | " " washer 148x21 ... | 1/2 | 1 | 1 | 1 | 1 |
| *5/1079 | Spring attachment bolt L324x8 ... | 6 | 2 | 2 | — | — |
| C5 | " " " nut 2039x8 ... | 2 | 2 | 2 | — | — |
| *5/1081 | " " " distance piece M3103x5 ... | 6 | 2 | 2 | — | — |
| C4 | " " " washer 148x22 ... | 1/2 | 2 | 2 | — | — |
| C7 | " " " spring washer ... | 1/2 | 2 | 2 | — | — |
| *5/1082 | Spring eye bolt M2673x9 ... | 3 | — | — | 2 | 2 |
| C4 | " " " washer 148x22 ... | 1/2 | — | — | 2 | 2 |

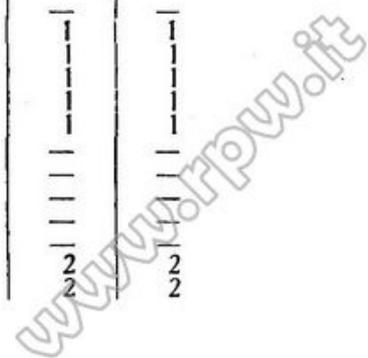

Please quote this number when ordering.

| Serial Number | Lamps and Accessories Group— Contd. | Price each £ s. d. | 1936 | 1936 | 1936 | 1936 |
|---------------|--|-----------------------|------------------------------|--------------|-----------------------|----------------------|
| | | | Special Model | Ulster Model | 250 c.c. Sports Model | 250 c.c. Rapid Model |
| | | | Number required per machine. | | | |
| 6/1343 | Head lamp bracket attachment bolt M1778x10 | 2 | 2 | 2 | 2 | — |
| 6/1344 | M4548x2 " " " " L.H. (top) | 2 | 1 | 1 | 1 | — |
| 6/1345 | Head lamp bracket attachment bolt R.H. (top) M2241x8 | 2 | 1 | 1 | 1 | — |
| 5/1116 | Head lamp attachment bolt M2079x7 | 2 | 2 | 2 | — | — |
| C7 | " " " " spring washer | 1/2 | 2 | 2 | — | — |
| 5/1118 | " " bulb (double filament) 6 volts 18/18 watts | 3 3 | 1 | 1 | 1 | 1 |
| 5/1120 | Head lamp dimmer bulb, 6 volts 3 watts | 1 3 | 1 | 1 | 1 | 1 |
| 5/1121 | Miller tail lamp with stop light complete | 9 6 | 1 | 1 | — | — |
| 5/1122 | Lucas " " " " " " " " | 13 6 | — | — | 1 | — |
| 5/1123 | " " " " complete " " " " | 6 6 | — | — | — | 1 |
| C31 | Tail lamp screw 564x6 | 1 | — | — | 3 | — |
| C52 | " " " " nut M3975x1 | 3 | — | — | — | 3 |
| C9 | " " " " nut 564x9 | 1 | — | — | 3 | — |
| C53 | " " " " M3975x2 | 1 | — | — | — | 3 |
| C10 | " " " " spring washer | 1/2 | — | — | 3 | — |
| 5/1124 | Tail lamp bulb 6 volts 3 watts | 1 3 | 2 | 2 | 2 | 1 |
| 5/1154 | " " cable clip M2115x7 | 1/2 | — | 10 | 10 | 5 |
| 6/1346 | " " " " connector | 1 0 | 2 | 2 | — | 1 |
| 6/1347 | " " " " double connector | 1 6 | — | — | 1 | — |
| 5/1155 | " " " " rubber bush | 2 | 4 | — | — | — |
| 5/1125 | Exide battery (less lid) 6 volts | 16 4 | 1 | 1 | — | — |
| 5/1126 | Lucas battery (less lid) 6 volts | 16 4 | — | — | 1 | — |
| 5/1127 | " " (with lid) 6 volts | 17 6 | — | — | — | 1 |
| 5/1128 | Battery support M4414x1 | 1 3 | 1 | 1 | 1 | 1 |
| *5/1129 | " " attachment bolt M4125x1 | 4 | 1 | 1 | 1 | — |
| *5/1130 | " " " " distance piece M4125x2 | 3 | 1 | 1 | 1 | — |
| *5/1131 | Battery support clamping plate M4239x2 | 1 | 2 | 2 | 2 | — |
| *5/1132 | " " rubber pad M4240x2 | 3 | 4 | 4 | 4 | — |
| 5/1133 | " " top plate M2718x8 | 9 | — | — | — | 1 |
| 5/1134 | " " clamping wire M4241x3 | 3 | 1 | 1 | 1 | — |
| 5/1135 | " " " " M4414x2 | 3 | — | — | — | 1 |
| C9 | " " " " nut 564x9 | 1 | 2 | 2 | 2 | — |
| 5/1136 | " " " " M2718x5 | 6 | — | — | — | 2 |
| *5/1137 | " " bolt (top) M2534x13 | 4 | 1 | 1 | 1 | 1 |
| C42 | " " nut M4526x1 | 1 | 1 | 1 | 1 | 1 |
| 5/1138 | " " washer (thick) M2718x6 | 4 | 1 | 1 | 1 | 1 |
| 5/1139 | " " (thin) M2534x3 | 3 | 1 | 1 | 1 | 1 |
| 5/1140 | " " seat tube clip M2241x12 | 2 | 1 | 1 | 1 | 1 |
| 5/1141 | " " " " bolt M1861x2 | 2 | 1 | 1 | 1 | 1 |
| C19 | " " " " bolt nut M4524x1 | 1 | 1 | 1 | 1 | 1 |
| 5/1142 | " " cover M4112x2 | 8 6 | 1 | 1 | — | — |
| 6/1348 | " " M4112x3 | 7 9 | — | — | 1 | — |
| *5/1145 | " " attachment plate M4240x1 with nut | 4 | 1 | 1 | 1 | — |
| *C75 | Battery cover screw M2686x3 | 3 | 1 | 1 | 1 | — |
| *5/1146 | " " fibre packing M4241x4 | 1 | 1 | 1 | 2 | — |
| 6/1349 | Lucas electric horn with handlebar switch | 15 0 | 1 | 1 | 1 | 1 |
| 6/1350 | Electric horn support plate M4811x1 | 3 | 1 | 1 | — | — |
| 6/1351 | " " " " bolt M2673x9 | 3 | 1 | 1 | — | — |
| C7 | " " " " spring washer | 1/2 | 1 | 1 | — | — |
| 6/1352 | " " clip M2241x13 | 3 | — | — | 1 | 1 |
| 6/1353 | " " bolt M4813x1 | 4 | — | — | — | 1 |
| 5/1150 | Cable harness built up complete (less dip-light cable for Miller set) | 6 0 | 1 | 1 | — | — |
| 5/1151 | Cable harness built up complete (with dip-light cable and switch for Lucas set) | 10 0 | — | — | 1 | 1 |
| 6/1354 | Cable band | 1/2 | 7 | 7 | 7 | 7 |
| 5/1153 | Cable leather strap | 3 | 2 | 2 | 1 | 1 |
| 5/1156 | Smith's chronometric trip speedometer with gearbox, cable and gear wheel (80 m.p.h. dial) | 2 10 0 | 1 | — | — | — |
| 6/1355 | Smith's chronometric trip speedometer with gearbox, cable and gear wheel (120 m.p.h. dial) | 2 16 0 | — | 1 | — | — |
| 5/1157 | Smith's chronometric trip speedometer with gearbox, cable and gear wheel (80 m.p.h. dial) | 2 10 0 | — | — | 1 | — |
| 6/1356 | Revulator complete (for solo or sidecar gears) | 12 0 | 1 | — | — | — |
| 6/1357 | " " " " " " " " | 12 0 | — | 1 | — | — |

www.rpw.it

Service Agents and Stockists

| | | |
|-------------------|-------|--|
| BARNSELEY | | T. Garner & Sons, The Arcade, Eldon Street. |
| BELFAST | | MacIntyre Bros., 52 May Street |
| BIRMINGHAM | | Motormyles Ltd., 28-30 Bristol Street. Frank Whitworth Ltd., 42 Easy Row. |
| BLACKBURN | | Cookes', 26 Ainsworth Street. |
| BLACKPOOL | | Lewis & Lockwood, Highfield Road. |
| BOURNEMOUTH | | E. P. Huxham, 40 Holdenhurst Road. |
| BRADFORD | | A. Hodgson, 10 Horton Road. E. S. Myers Ltd., 52 Manningham Lane. |
| BRISTOL | | J. Whalley, 21 Old Market Street. |
| BURY | | Auty & Lees Ltd., 30 Stanley Street. |
| BURNLEY | | J. Hebden & Sons, 149 St. James Street. |
| CAMBRIDGE | | King & Harper Ltd., 3 Bridge Street. |
| CANTERBURY | | A. T. Bates, 70 and 71 Burgate Street. |
| CARDIFF | | Glanfield, Lawrence (Cardiff) Ltd., 2 City Road. |
| CHELTENHAM SPA | | A. Williams & Co. Ltd., 10 Portland Street. |
| COLCHESTER | | Motor Cycle & Light Car Depot, 119 High Street. |
| DARLINGTON | | White Bros., Northgate. |
| DERBY | | Jepson's Motor & Cycle Depot, 3 Babington Lane. |
| DONCASTER | | Millns & Co., 9 High Street. |
| EDINBURGH | | Alexander & Co., 113-117 Lothian Road. |
| ENFIELD | | D. J. Shepherd & Co., Mountjoy Garage, Enfield Highway. |
| EXETER | | P. Pike & Co. Ltd., Alphington Street. |
| GLASGOW | | Bell Bros., 223 St. George's Road. |
| GLOUCESTER | | A. Williams & Co. Ltd., 92 Westgate Street. |
| GUILDFORD | | Weston & Phillips, The Broadway, Woodbridge Road. |
| HUDDERSFIELD | | Earnshaw's, 10 Cloth Hall Street. A. Moore, 20 Bradford Road. |
| HULL | | W. L. Thompson Ltd., 83 Anlaby Road. |
| HOVE | | Bradshaw's, 6 Western Road. |
| LANCASTER | | W. J. Airey, 14 Owen Road. |
| LEEDS | | Watson Cairns Ltd., Lower Briggate. |
| LIVERPOOL | | Motormyles Ltd., 89 Bold Street. |
| LONDON | | E. E. Atkinson, 415 Barking Road, East Ham. C. P. Dyne, 72, Falcon Road, Battersea. Glanfield, Lawrence (London) Ltd., 230 Tottenham Court Road. Hall of Balham, 48 High Road, Balham, and 226 Whitehorse Road, Croydon. R. G. Houchin Ltd., 185 High Street, Peckham. Kay's, 8-10 Bond Street, Ealing. Lawrence-Freeman Motors Ltd., 191 Hammersmith Road, Hammersmith. Motormyles Ltd., 218 Great Portland Street. Renno's, 232/4 Upper Street, Islington, and branches. |
| LUTON | | Dunham & Haynes, 46 Castle Street. |
| MANCHESTER | | Scott Brettell Ltd., 192 Deansgate. Fred Fearnley, 672 Ashton Old Road, Openshaw. |
| MIDDLESBROUGH | | E. Upton & Sons, 175 Linthorpe Road, and Branches. |
| NEWCASTLE-ON-TYNE | | Adams & Gibbon Ltd., 83 Blackett Street. The Dene Motor Co., Haymarket. |
| NORWICH | | Willmott's Stores Ltd., 43-51 Prince of Wales Road. |
| NOTTINGHAM | | Poole's 16 Chapel Bar. |
| PLYMOUTH | | P. Pike & Co. Ltd., 166 Union Street. |
| READING | | Phillips & Powis Motors Ltd., 34 South Street. |
| SCUNTHORPE | | Bennett's Cycle Depot, 70 Frodingham Road. |
| SHEFFIELD | | Motormyles Ltd., 11-15 West Bar. |
| SOUTHAMPTON | | A. Bennett, The Broadway Garage, Portswood. |
| SOUTHPORT | | Lifes Motors, 32-36 West Street. |
| SOUTHSEA | | Warren's, 16b Elm Grove. |
| STOCKTON-ON-TEES | | Dinsdale's Service Garage, Yarn Lane. |
| STOKE-ON-TRENT | | Broadway Motors, Liverpool Road. |
| SUNDERLAND | | Binns Ltd., Vine Place. |
| TODMORDEN | | W. H. Midgley, 270 Rochdale Road. |
| WALLASEY | | Ward's Garage, 3-11 Leasowe Road. |
| WARRINGTON | | J. Frodsham, Sankey Street. |
| WINCHESTER | | Winchester Cycle Co., Jewry Street. |
| WORTHING | | F. Wheatland, 56 Broadwater Street, West. |
| YEOVIL | | Yeovil Motor Mart, Hendford. |
| YORK | | J. D. Shearsmith, Blossom Street. |

THOMAS PATTERSON

Automobile Engineer

1. ISADORE AVENUE

BELFAST, 13

